




B43A023004-1 (MIDI, 433 MHz)  
B43A024002 (MINI, 433MHz)  
B86A023004 (MIDI, 868 MHz)

## Hand Transmitters SKR433-1 + SFR868

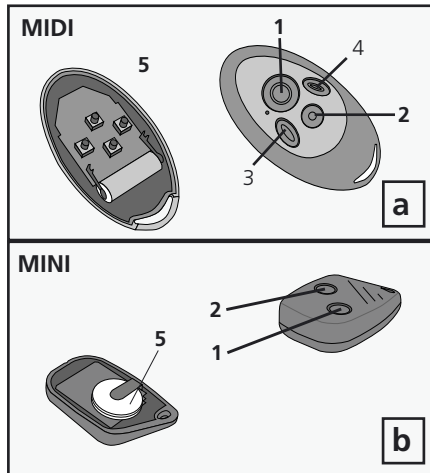

Batteries (5)

**MIDI-Transmitter:**

One 12V battery is required.  
Possible types of batteries: A23, 23A, 23L, EL12, VR 22 and MN 21

**MINI-Transmitter:**

Two 3V batteries are required.  
Possible types of batteries: CR1616 oder DL1616

**Old batteries must be disposed as to national regulations!**

### Situation 1

**When you have got a working transmitter and want to use the new transmitter in addition:**

- 1.1.) Open the garage door for at least 50 cm
- 1.2.) Close the garage door with the existing transmitter
- 1.3.) You have now got 10 seconds within which you must press the buttons 1+2 on the existing transmitter simultaneously for approx. 3 seconds
- 1.4.) Release the hand-transmitter buttons once the operators' light starts blinking
- 1.5.) Take the new transmitter and press the button you want to use for the operator
- 1.6.) The operators' light stops blinking and the new hand-transmitter is now ready for use

### Situation 2

**When you do not have a working hand-transmitter:**

- 2.1.) Open the operators housing (one screw needs to be unscrewed)
- 2.2.) Press the LERN/LEARN button on the electronics for approx. 3 seconds until the operators' light starts blinking
- 2.3.) Take the new transmitter and press the button which you want to use with the operator
- 2.4.) The operators' light stops blinking and the new hand-transmitter is now ready for use

### Situation 3



**When you are using an operator with a MINI-receiver (normally not a Seip operator):**

- 3.1.) The MINI-receiver is usually installed inside the housing of a component. You might have to open the housing to access the MINI-receiver.
- 3.2.) Take the new transmitter and hold it very close to the MINI-receiver right besides the LED-lamp. Keep the transmitters' button no. 1 pressed until the LED-lamp turns on. Release the transmitters' button and press the button you want to use with the receiver - the LED switches off and the transmitter is now ready for use.



Before you can use your hand-transmitter it must be registered with the receiver.  
Situation 1 and 2 describe the registration procedure with the garage door operators TS75 and TS100.

#### Situation 1

You have got at least one working hand-transmitter and want to register the new transmitter to be used in addition:




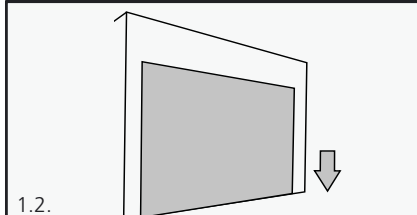
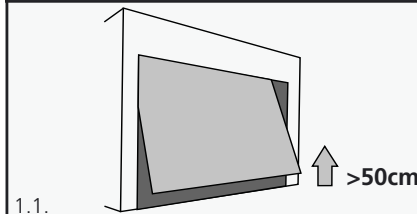


„old“ transmitter keep pressed for 3 sec.

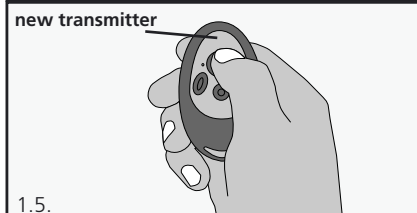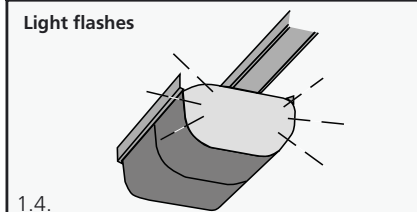



#### Situation 2

You do not have a working hand-transmitter:

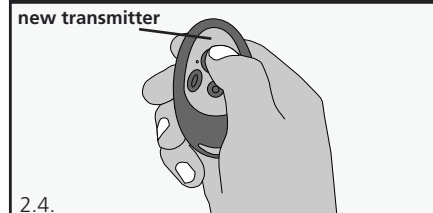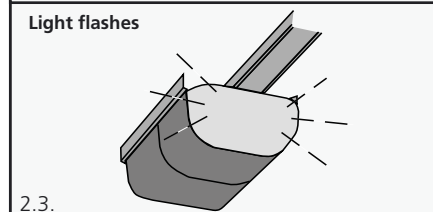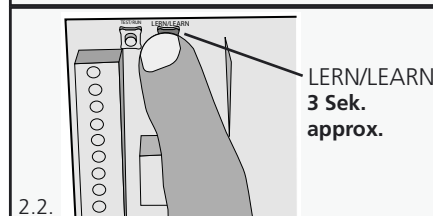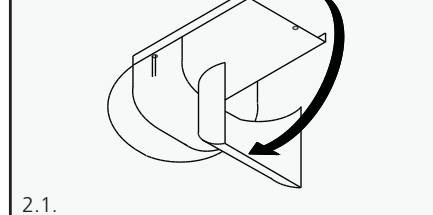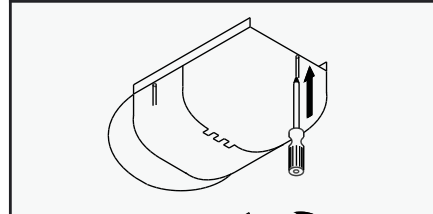

#### Situation 3:

You want to use the new transmitter with a Seip external MINI-receiver (usually for gate-operators, alarmsystems and other non-Seip devices):

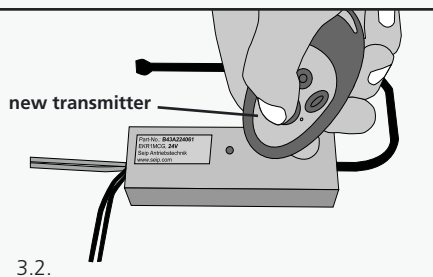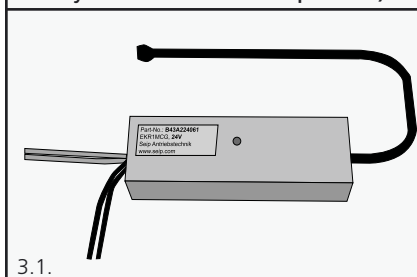

#### CE-Declaration

These products comply with the technical requirements of the European Community. They carry the CE-Label and can be used in all EC-countries and Switzerland without further applications. The declaration of conformity can be found on the internet in the download area at [www.seip.com](http://www.seip.com) as part of the installation instructions for the garage door operators TS and TM60.