
SWS UK


SeceuroGlide Sectional Plus
Fitting Instructions

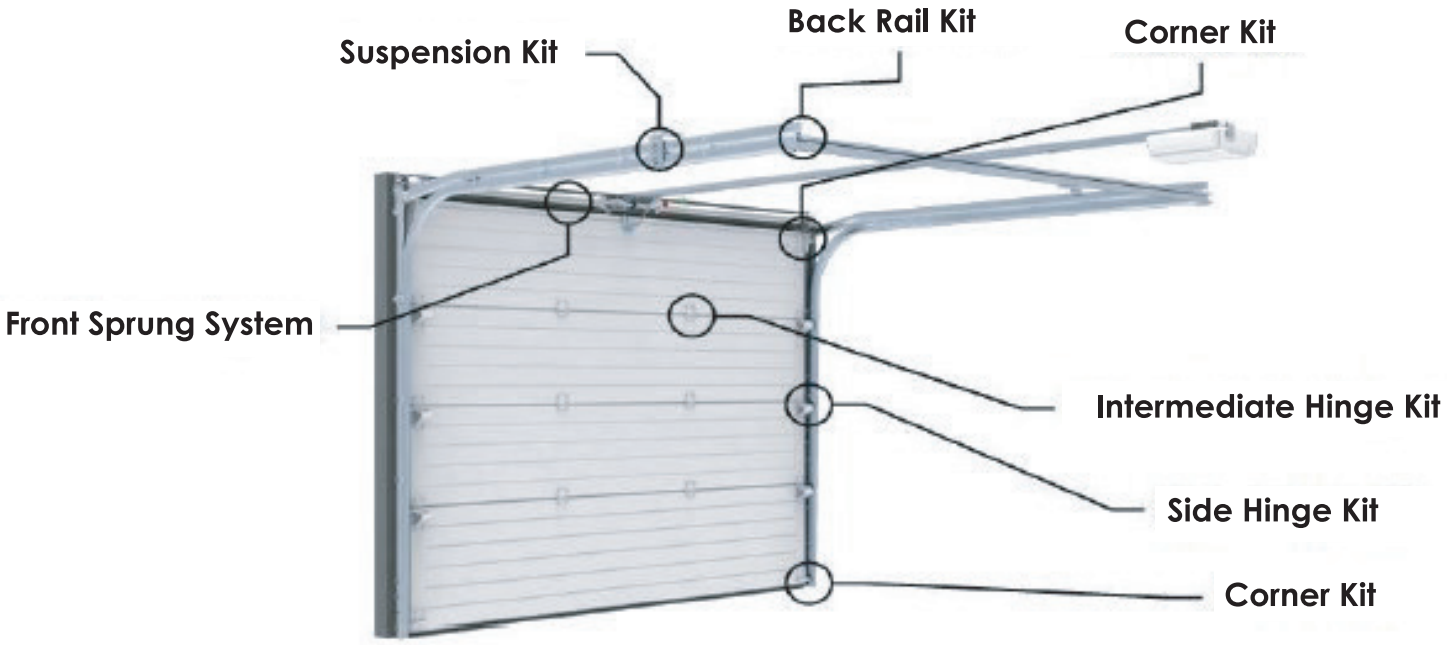


SeceuroGlide | Sectional Plus
Front Mounted System

Fitter's Information Pack - SeceuroGlide Sectional Plus



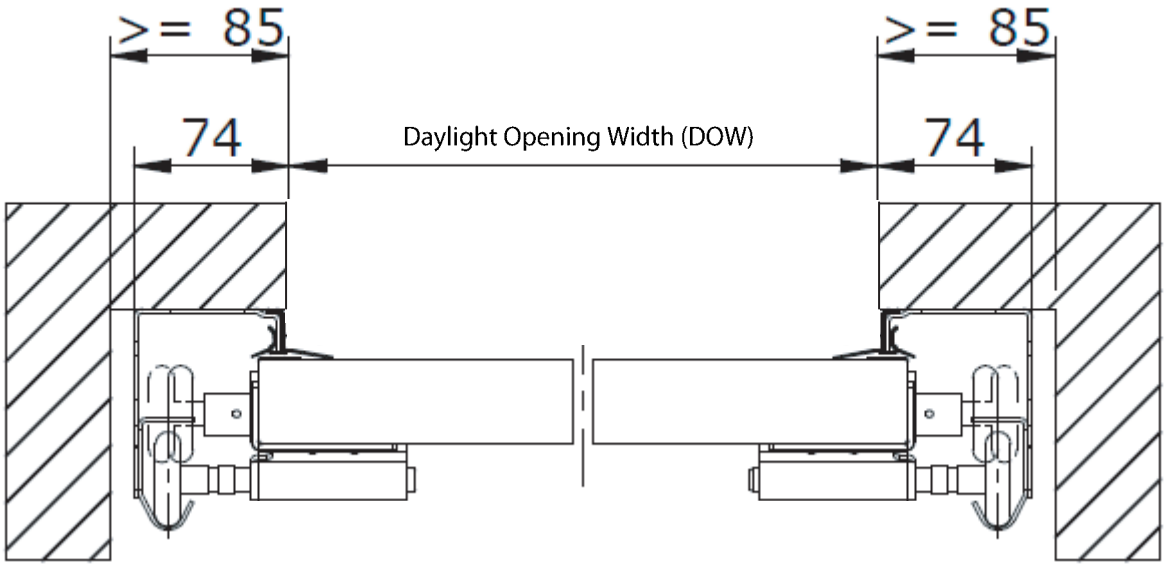

EN 12604
EN 12453
EN 13241

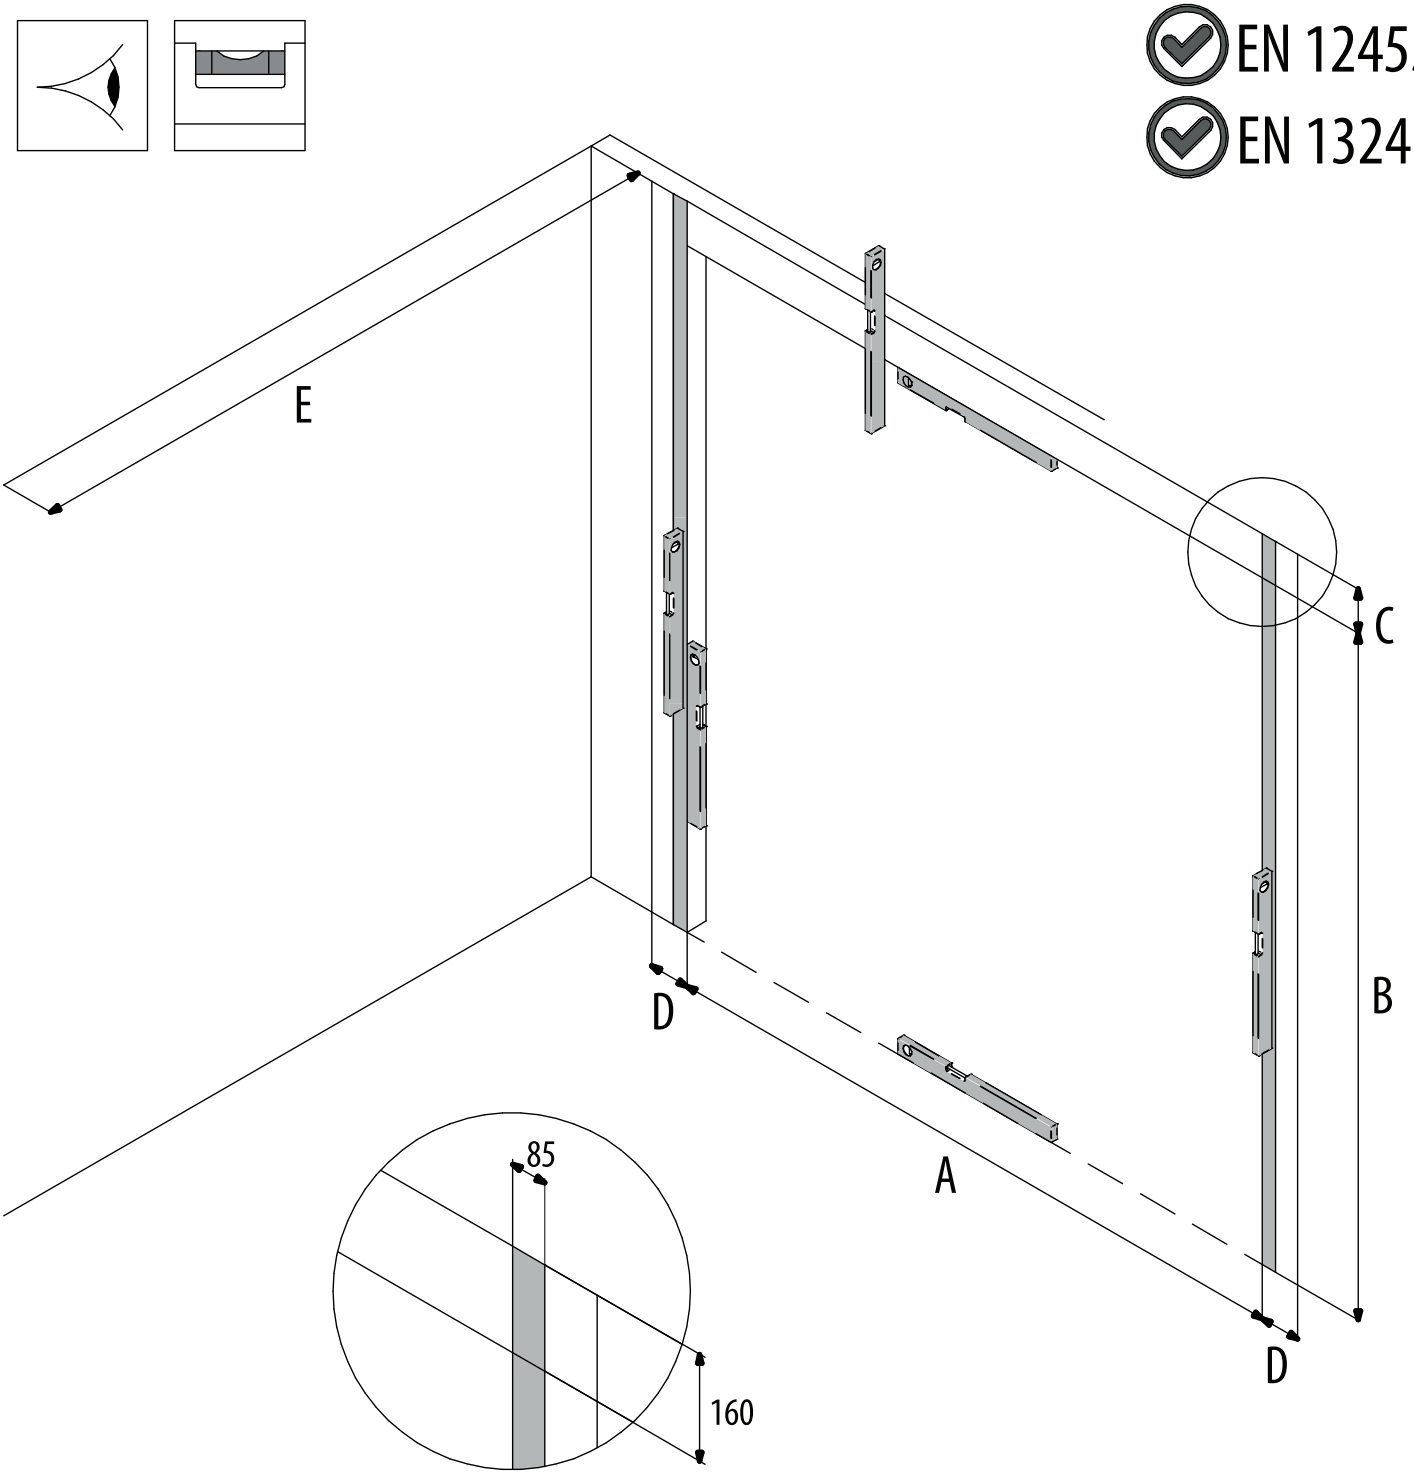



A	B	C	D	E
DLW	**DLH**	**FHR**	**FSR**	**FMD**
Daylight Width	Daylight Height	Free Head Room	Free Side Room	Free Mounting Dept


Seals are 100mm larger then needed, cut down to suit the opening


Slide weather seals onto vertical tracks


Bolt front spring support bracket to vertical track

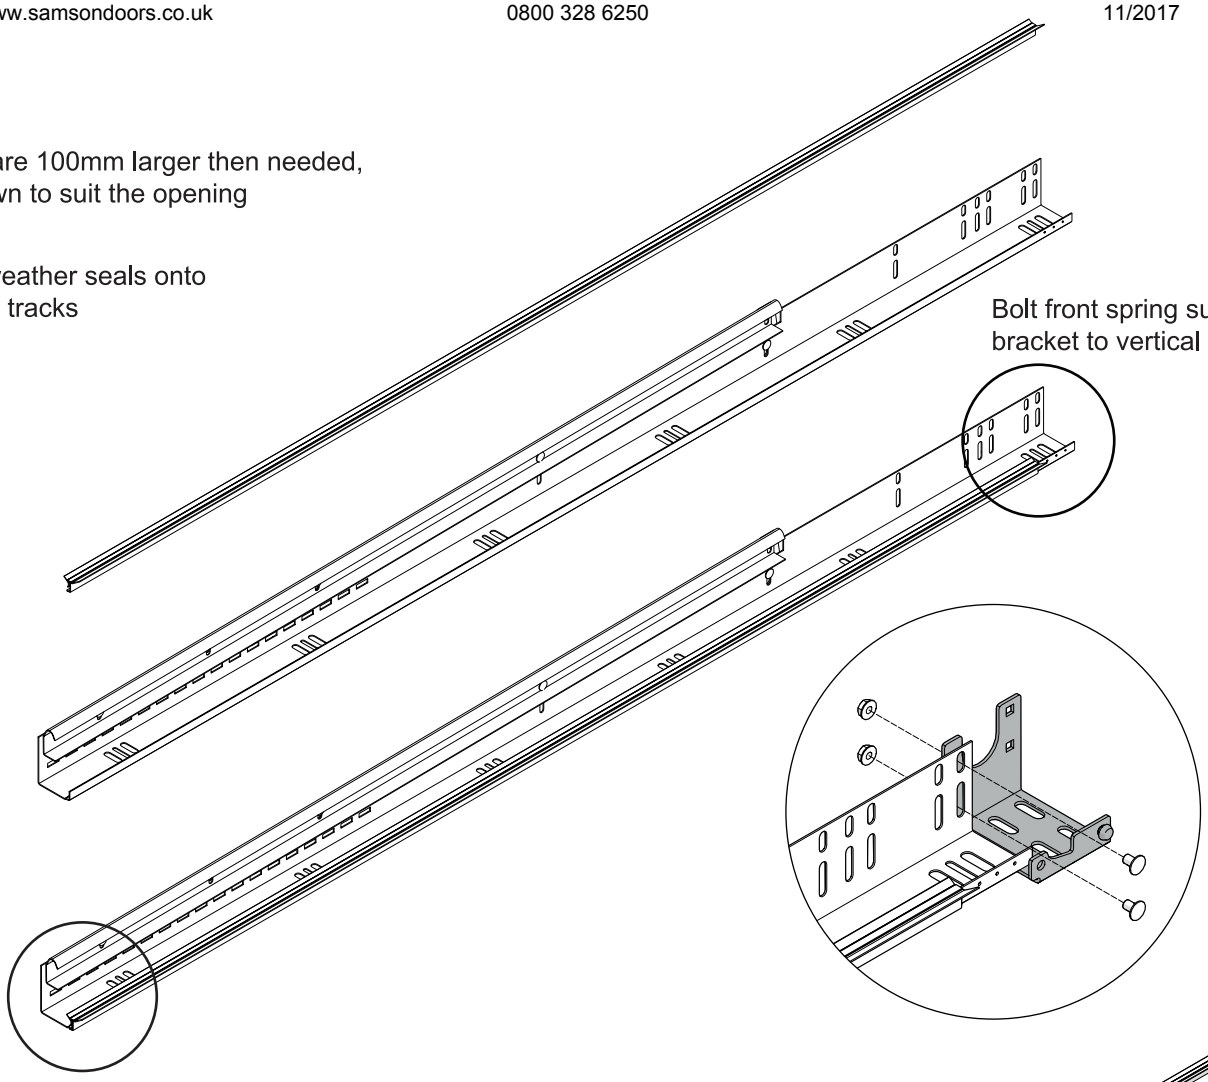

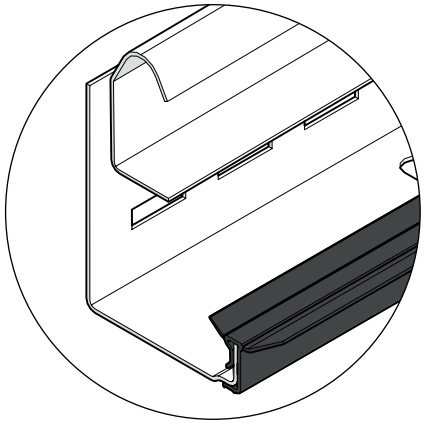

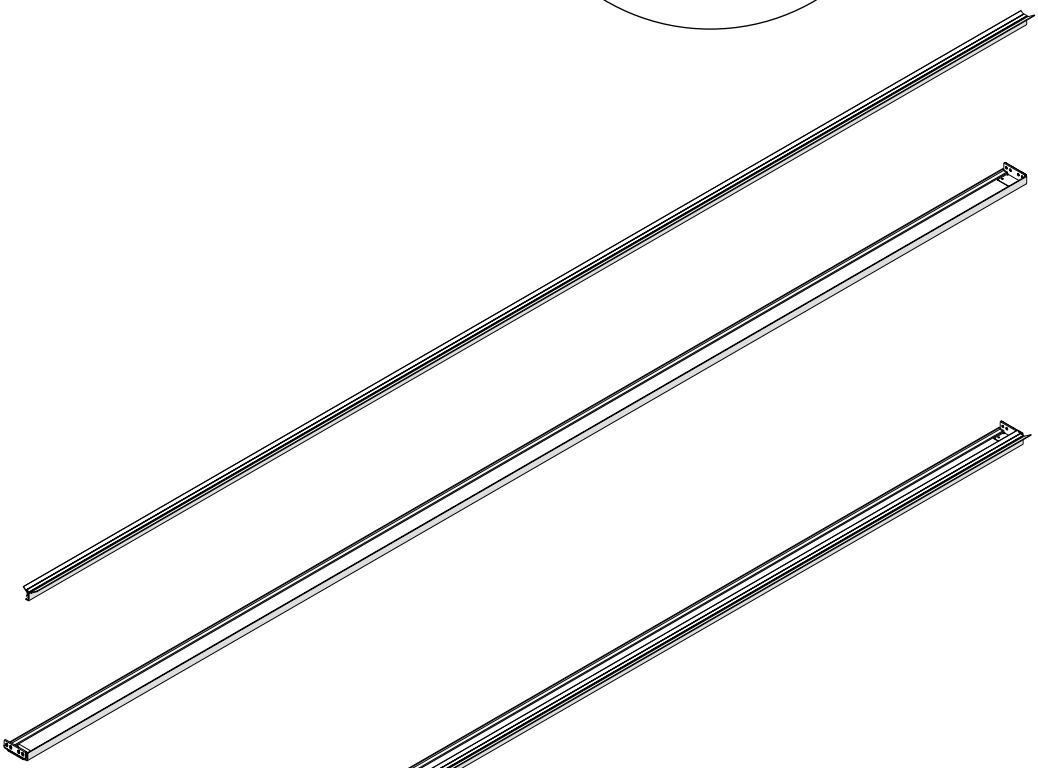


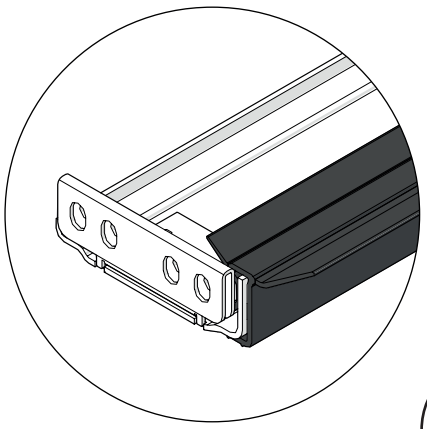


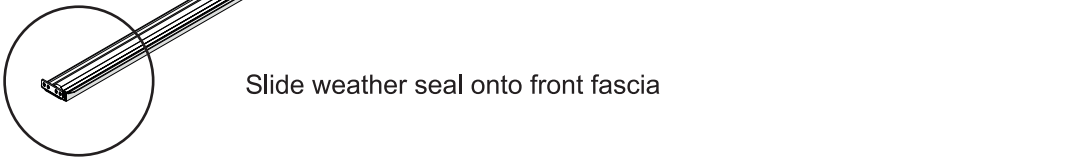



Slide weather seal onto front fascia


Assemble top tracks as below

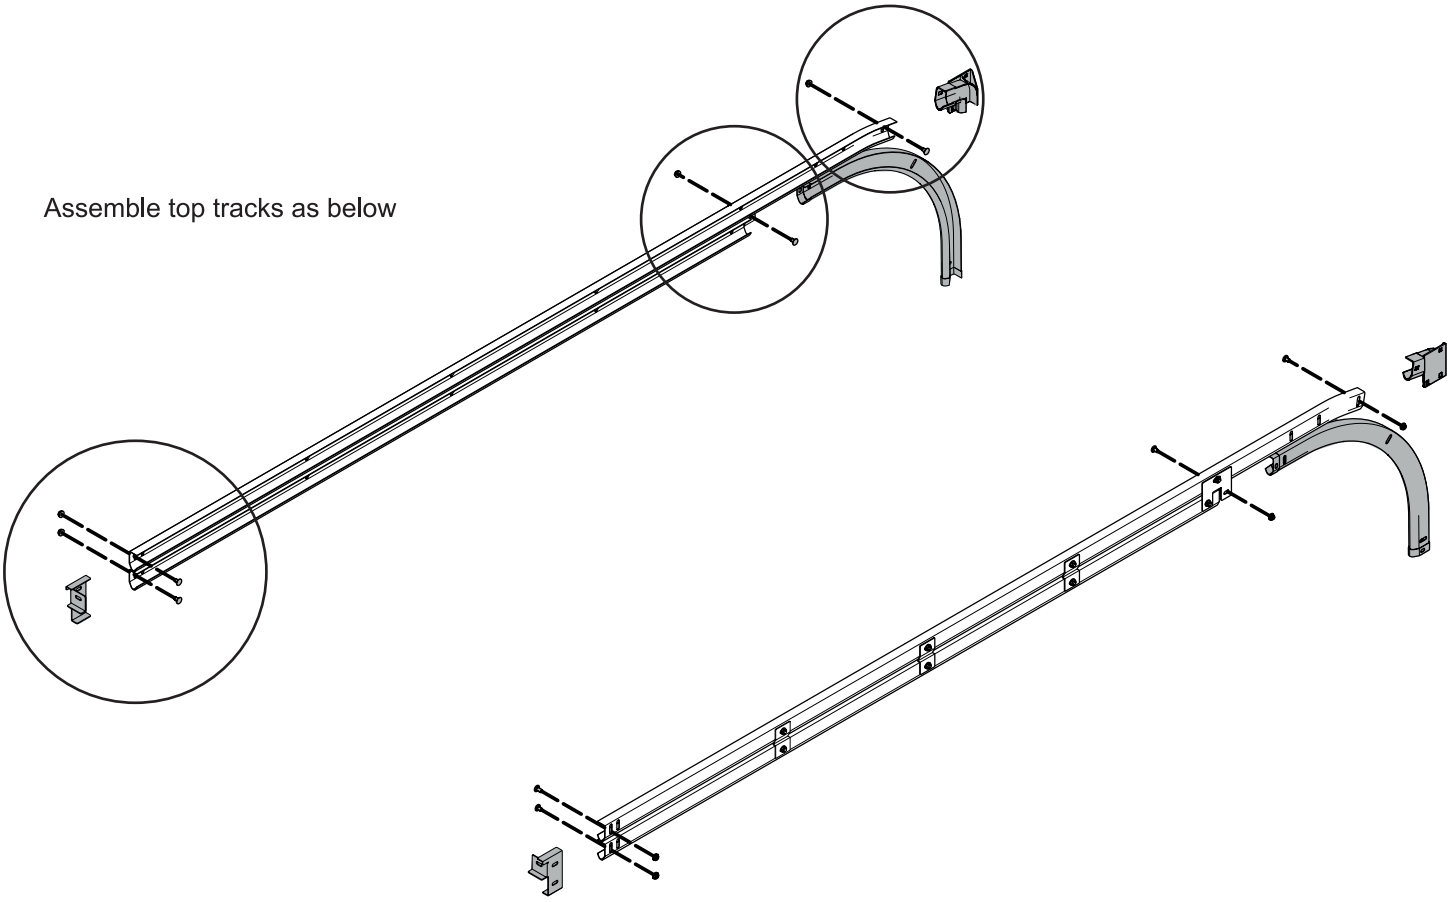

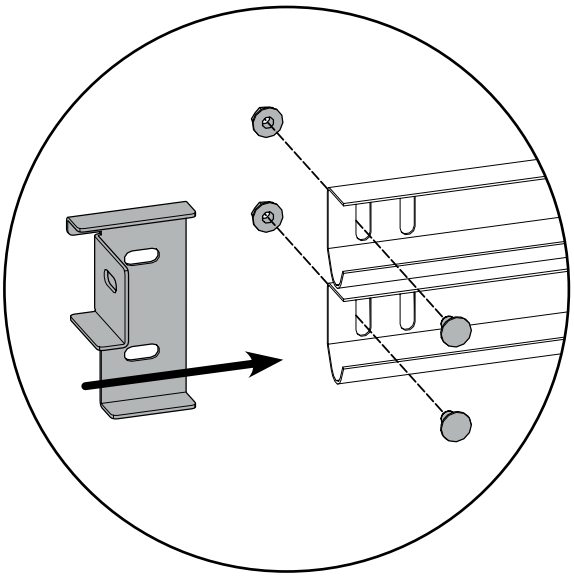


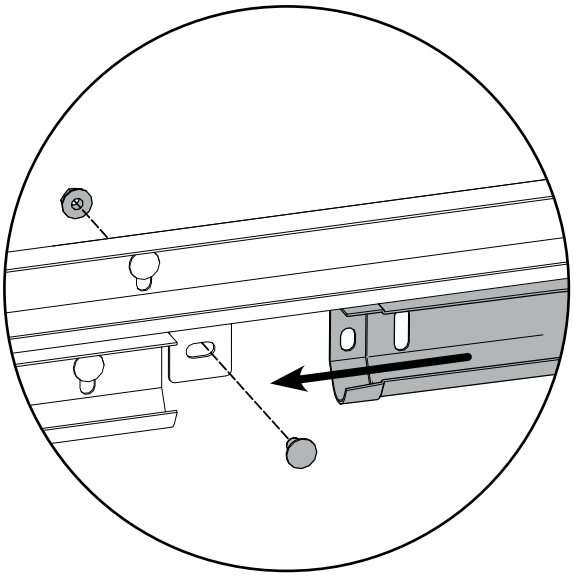

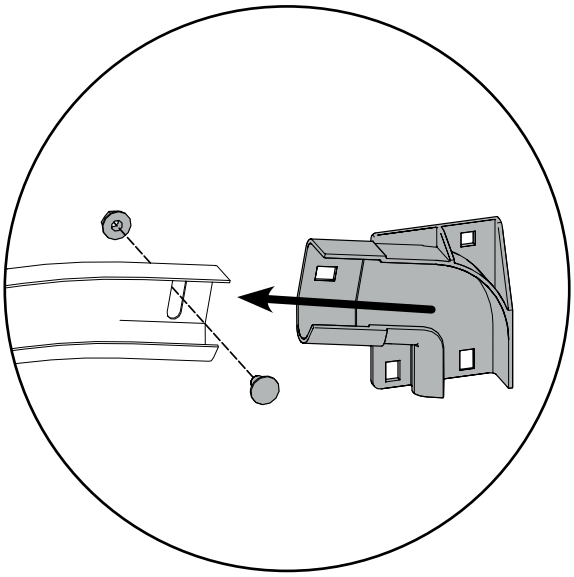


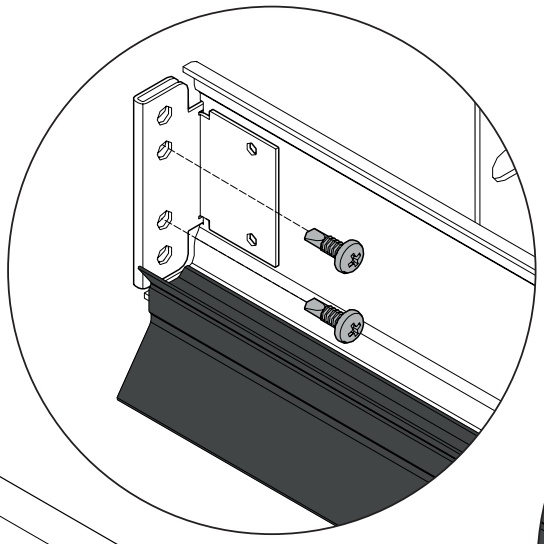



Lift the fascia into place and secure

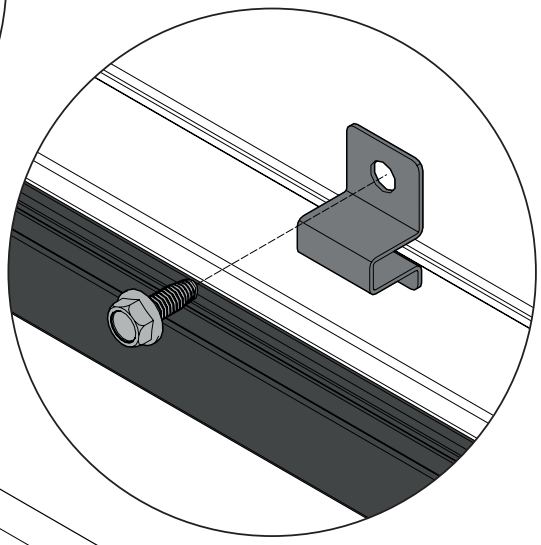

Clamp tracks
to the wall

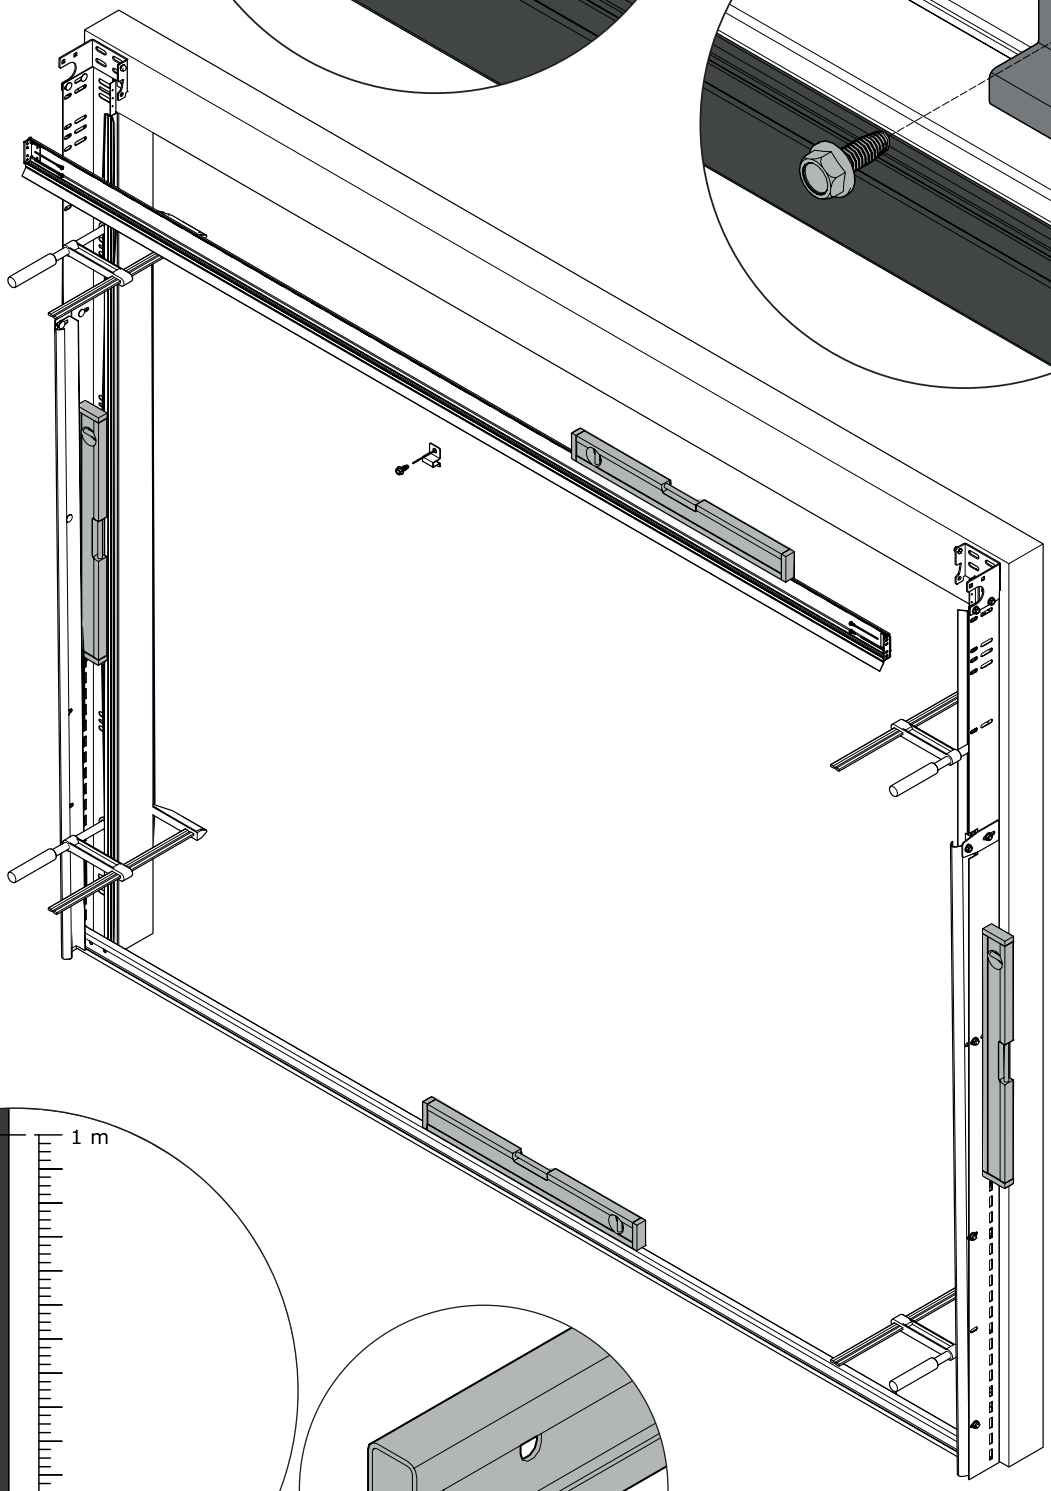


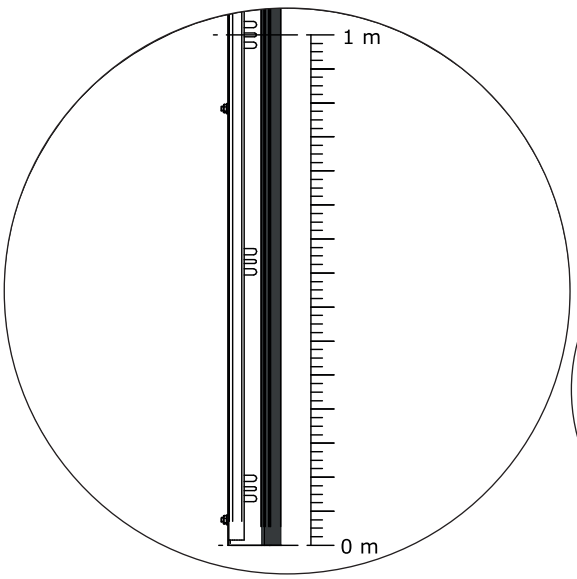

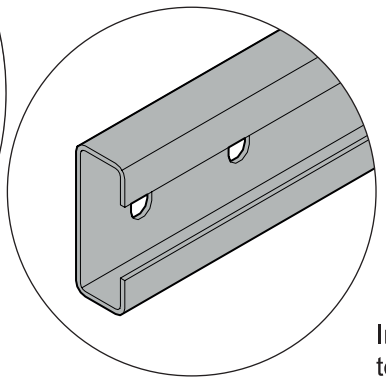


Insert the back bar between angles
to determine the track width


Once the frame is level, secure with the fixings below.

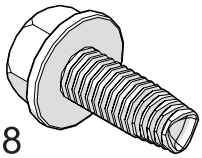


Ø8

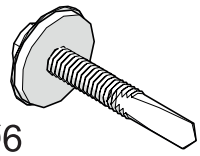



Ø6

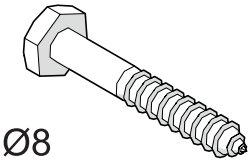


Ø8

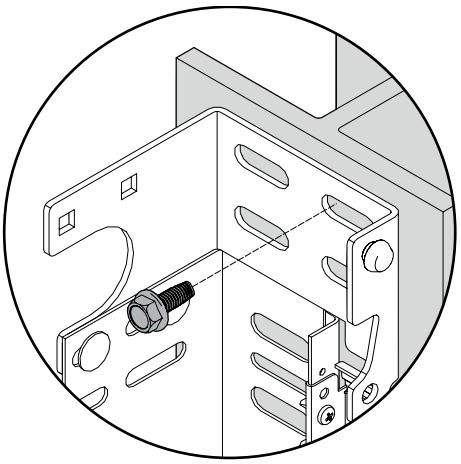


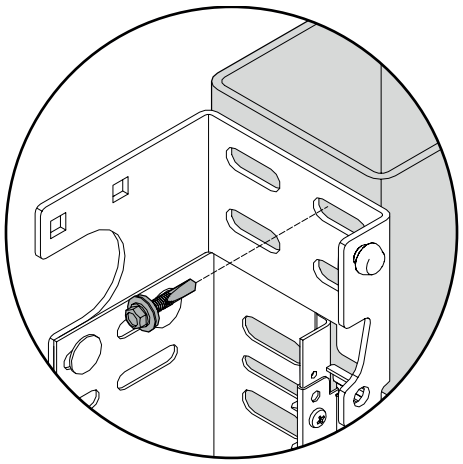


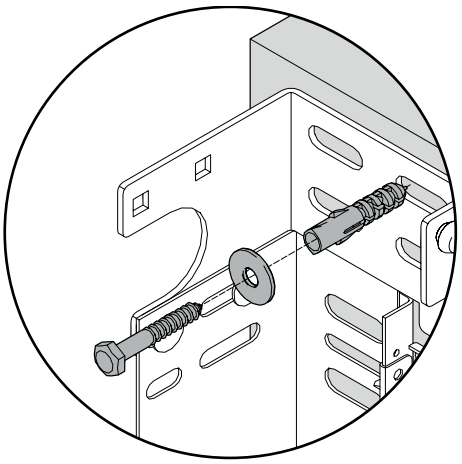


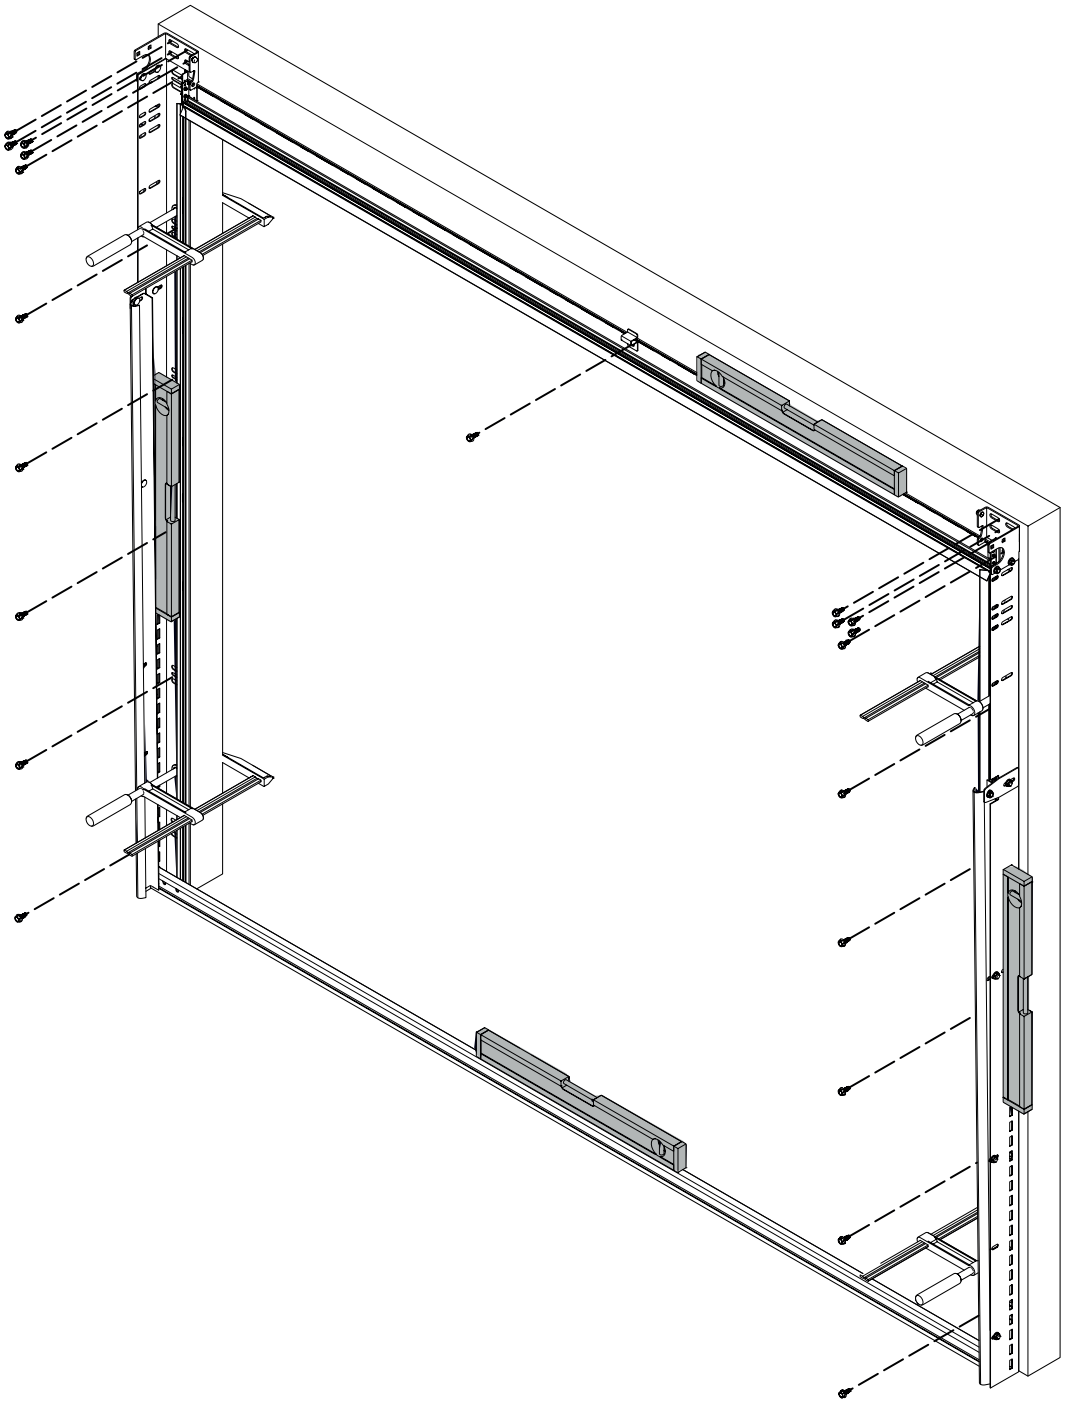


Assemble horizontal tracks as shown

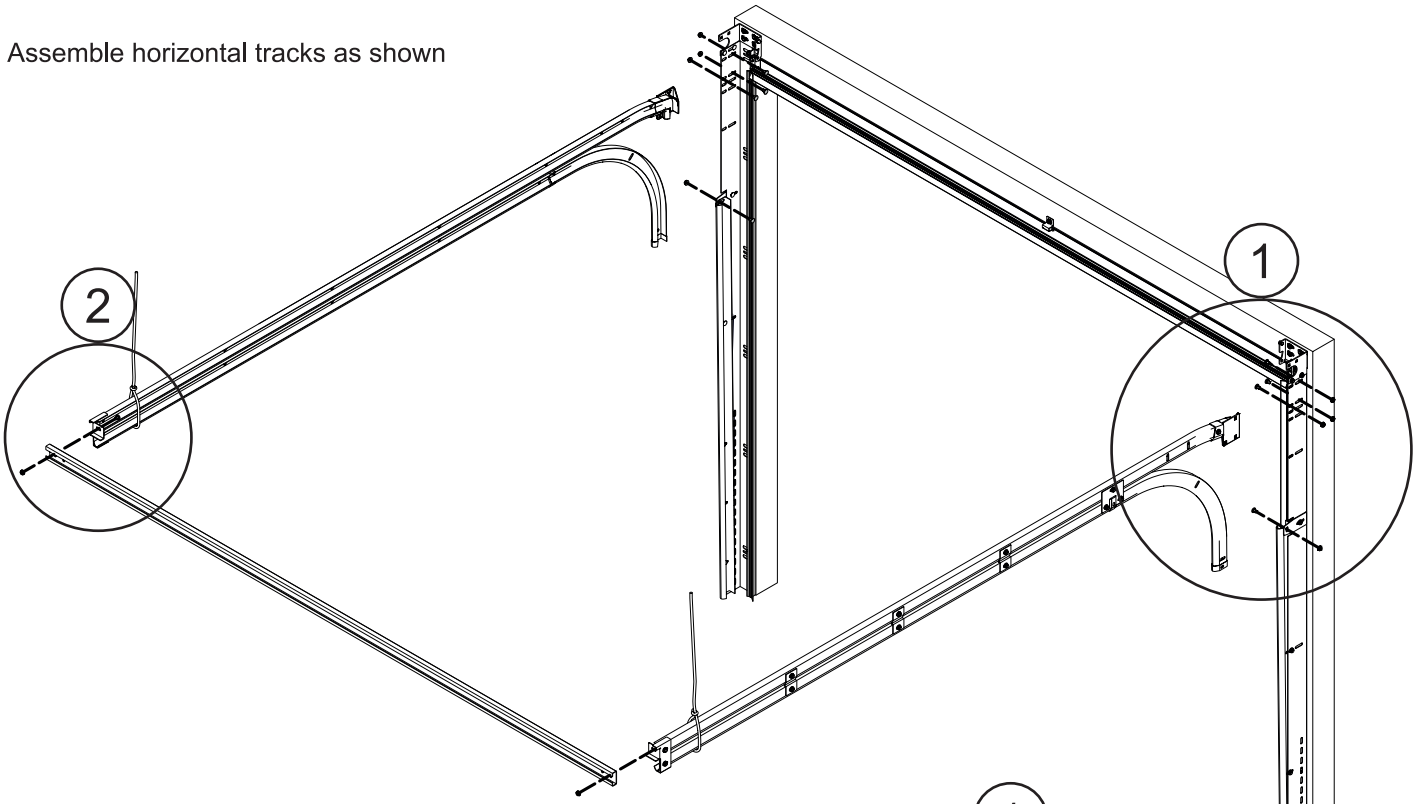


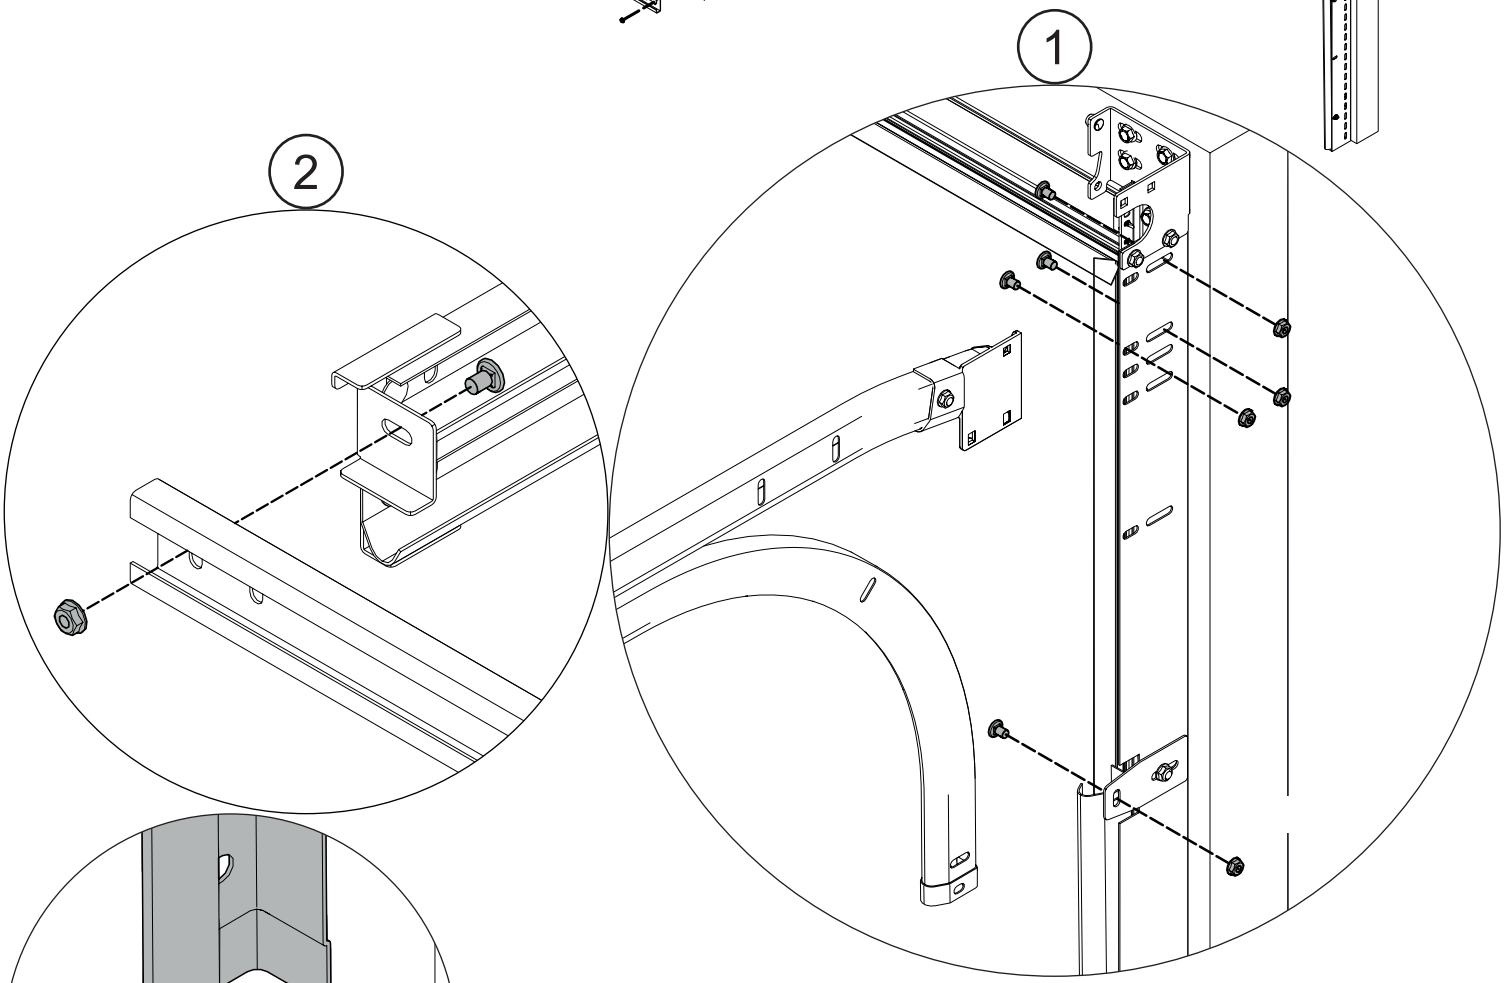


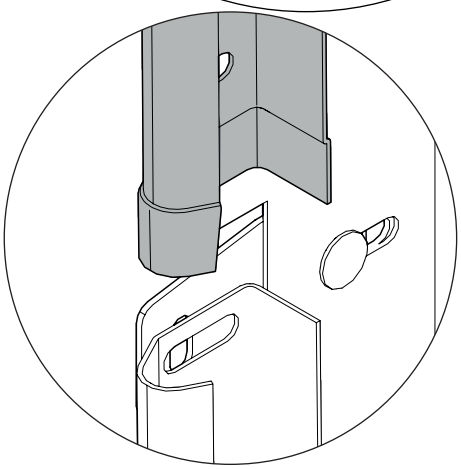

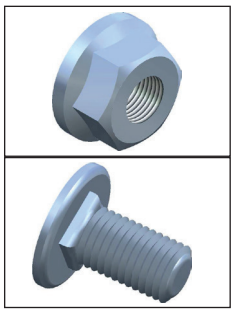



Measure from corner to corner to determine if the horizontal track area is square, adjust accordingly. Before securing the L shape hangers, ensure the horizontal tracks are level

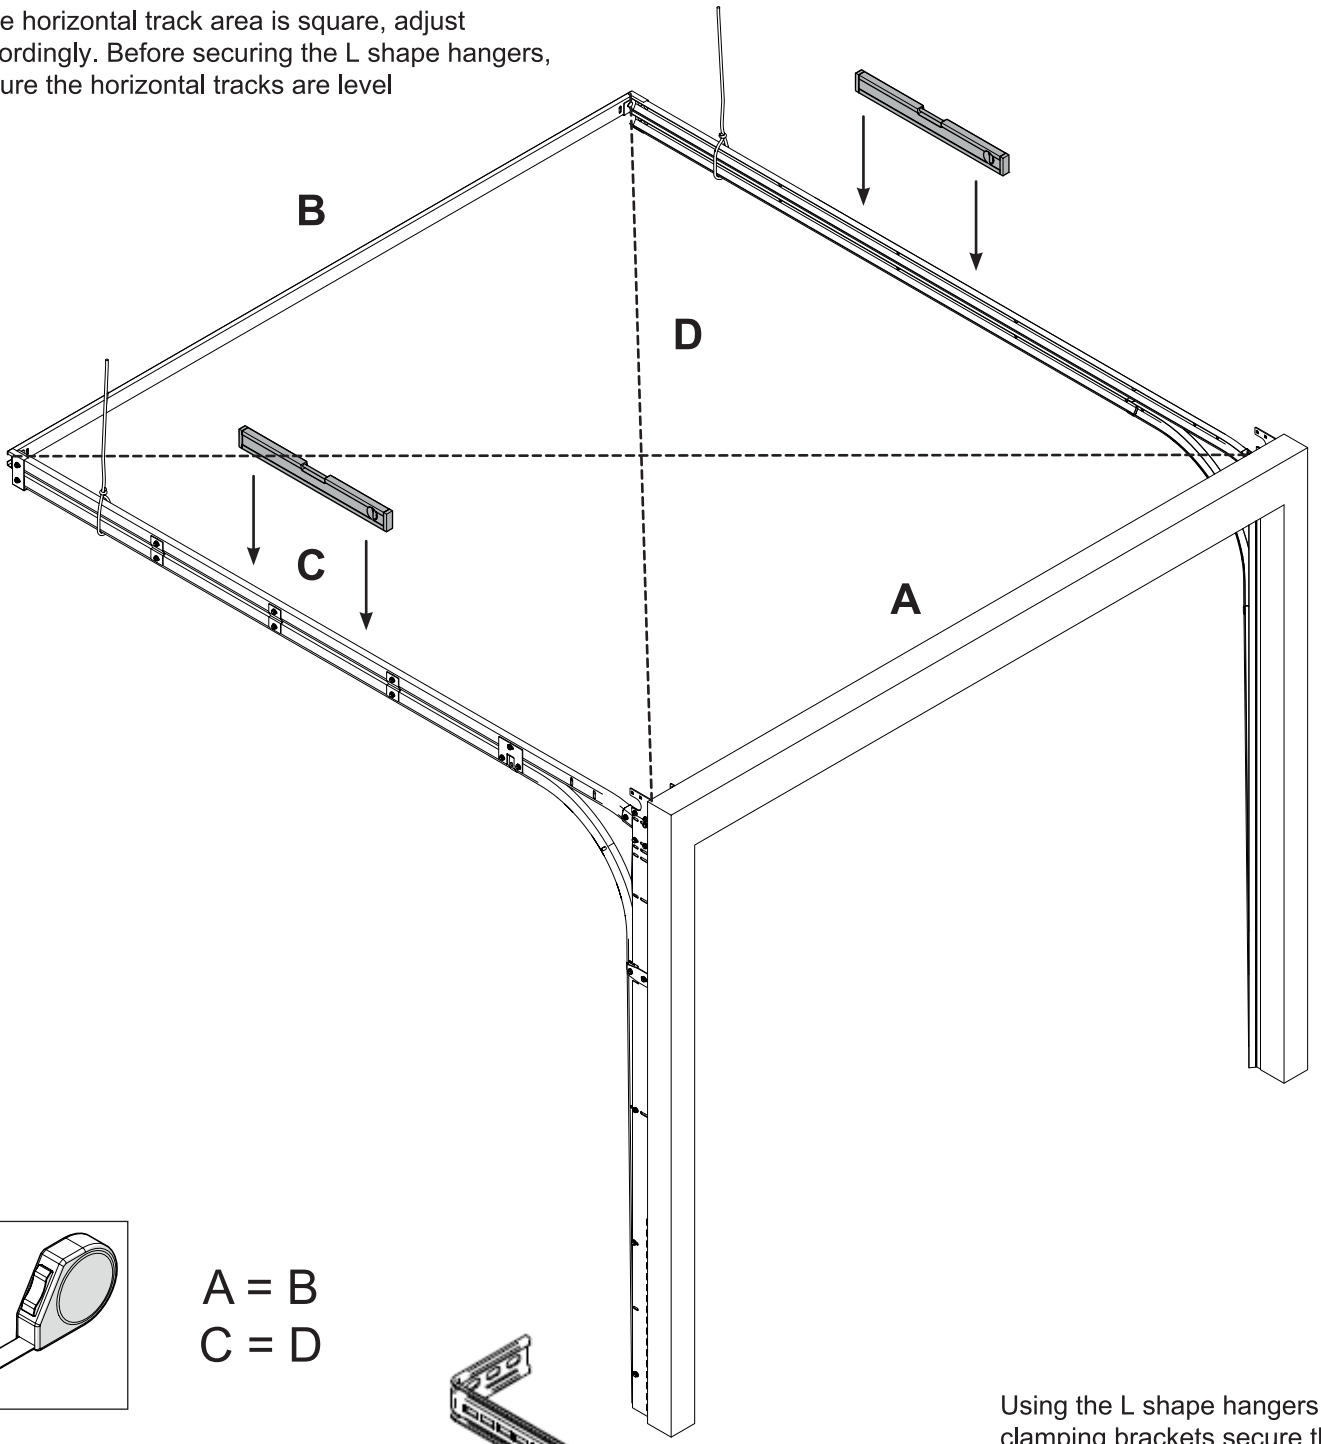

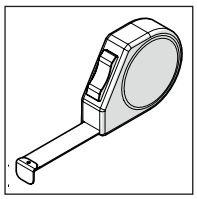


A = B
C = D

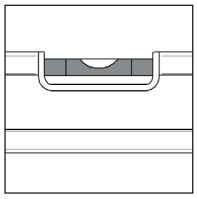


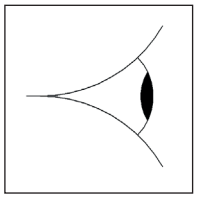

Using the L shape hangers and the clamping brackets secure the back bar to neighbouring walls

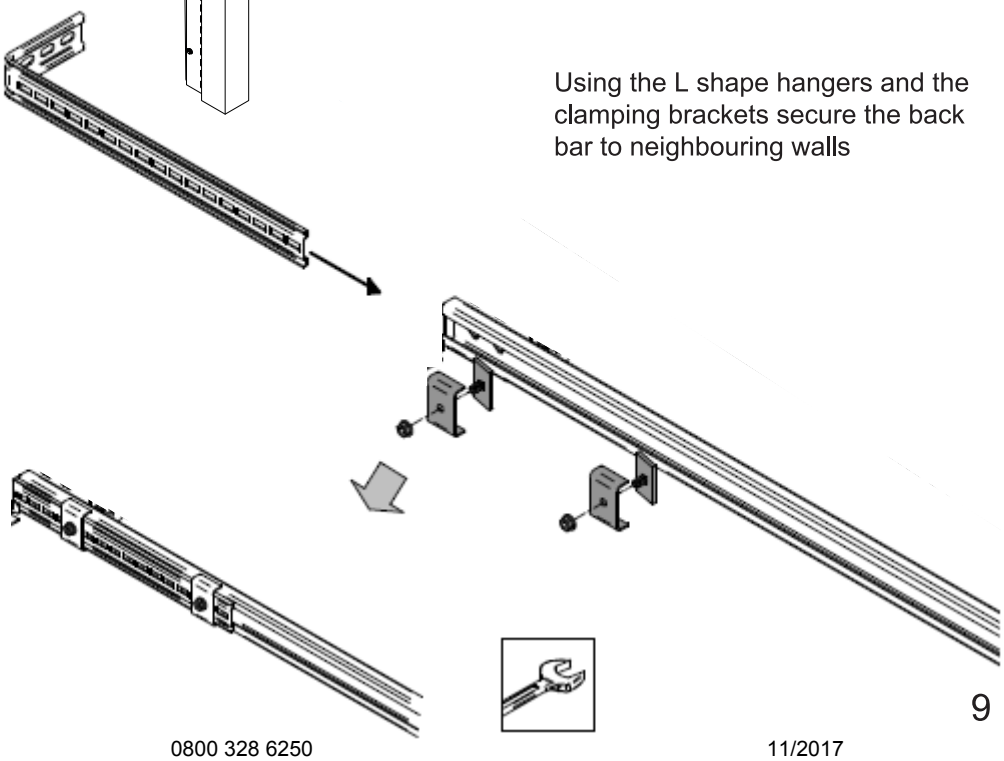



Fit L shape hanger to horizontal track and position to underside of adequate fixing point

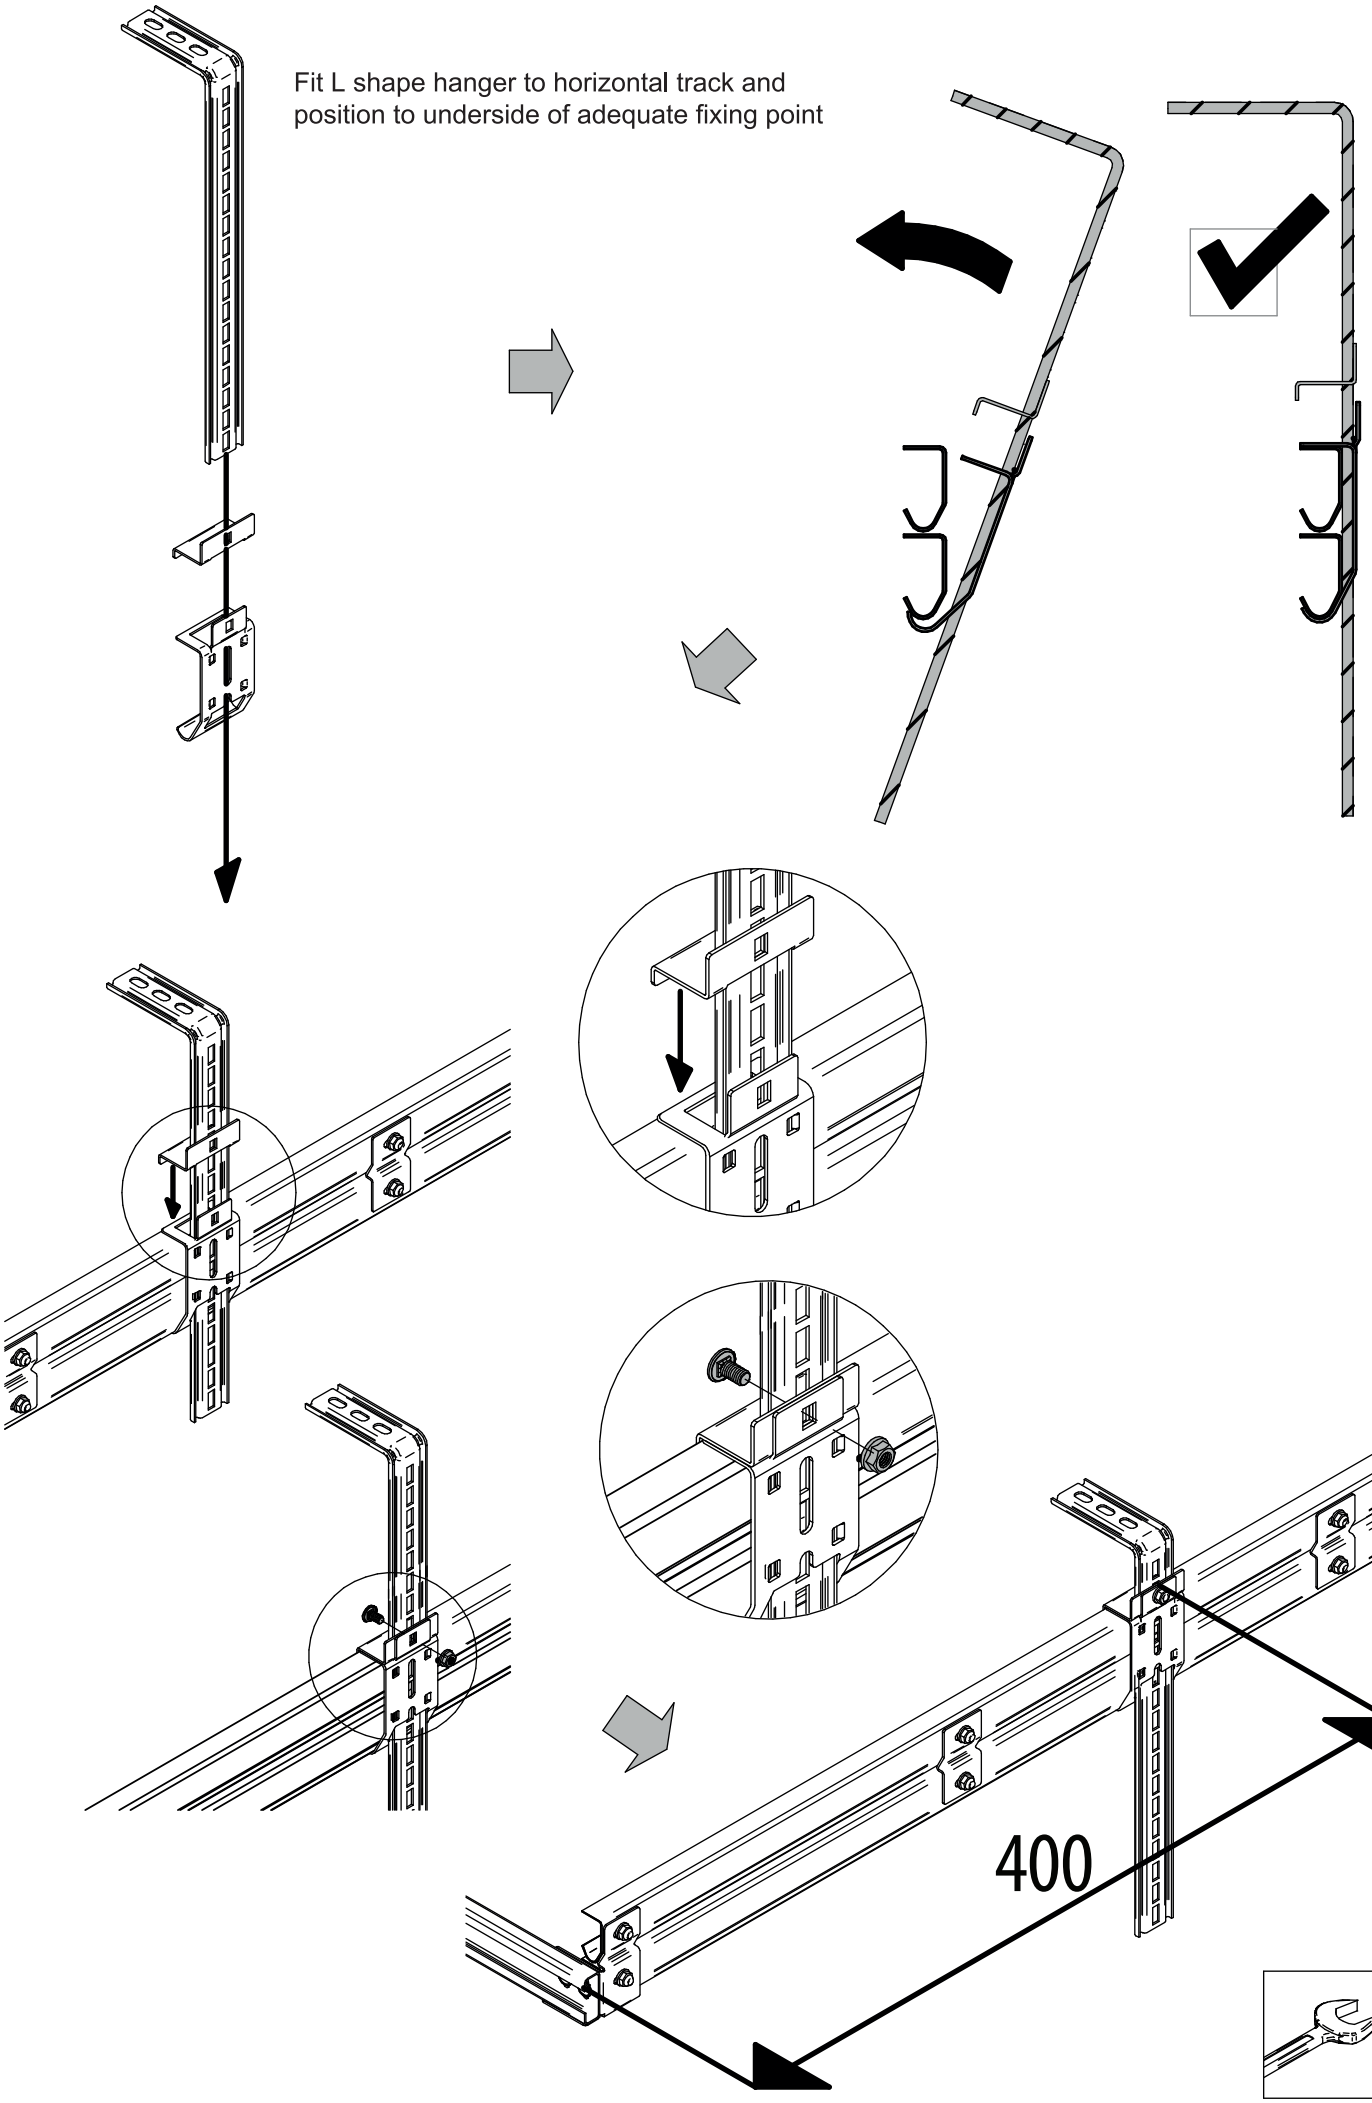


Join the front bar together. Lift and secure into place and secure onto the front mounted brackets


Fix central supporting brackets

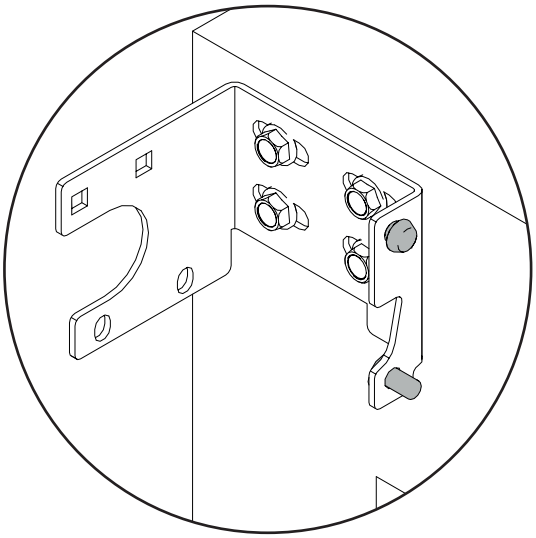


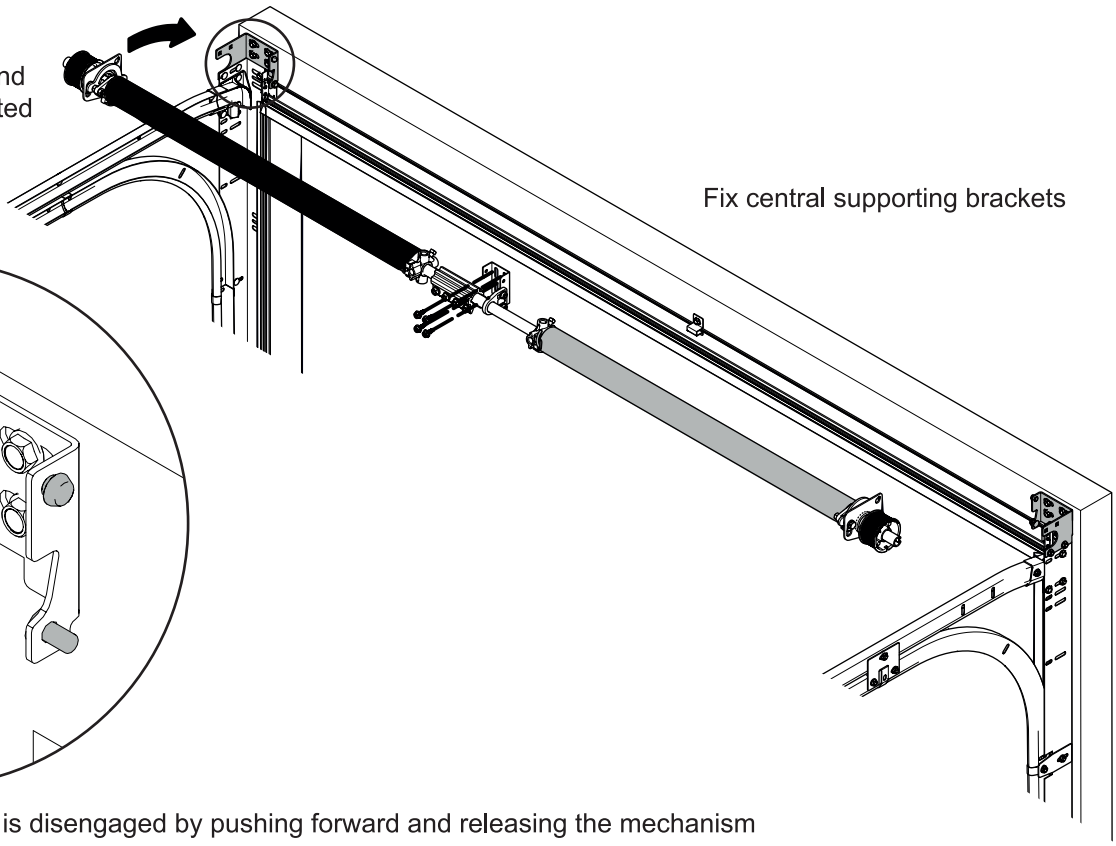

Ensure that the safety brake is disengaged by pushing forward and releasing the mechanism

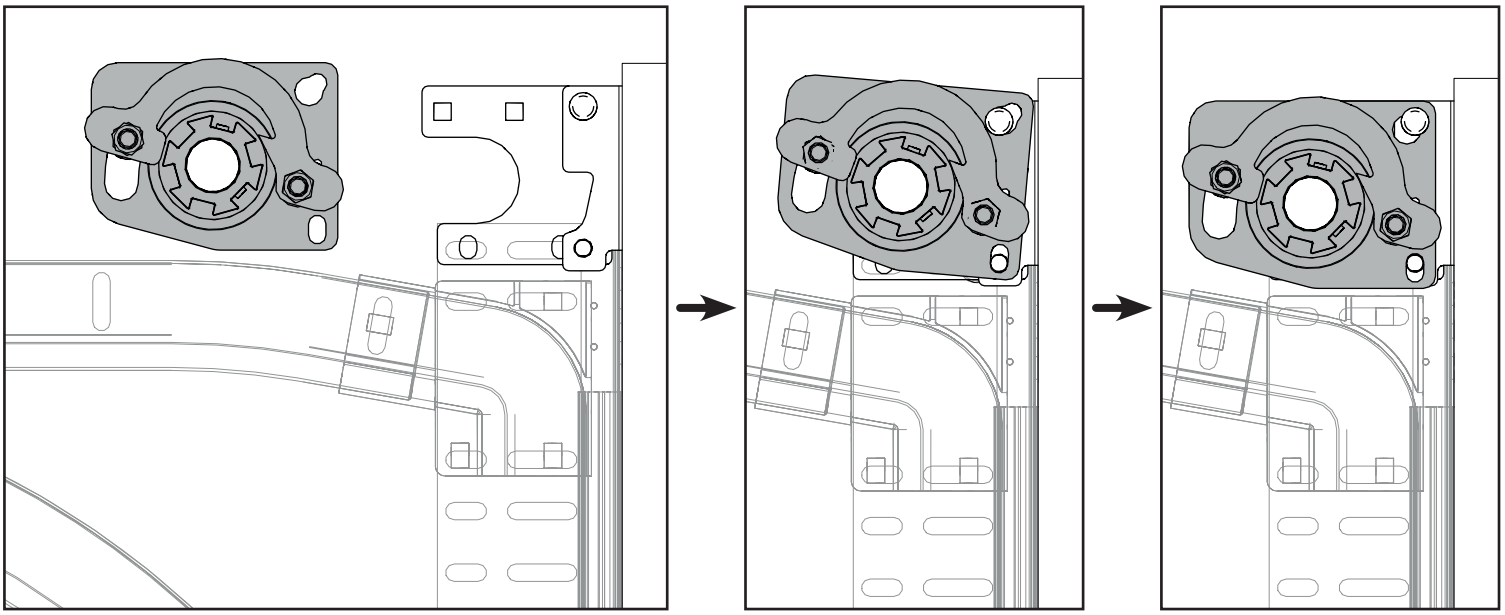


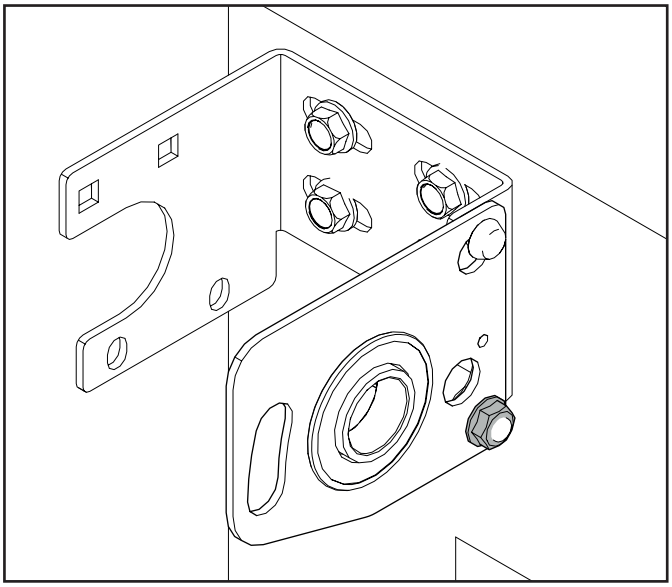


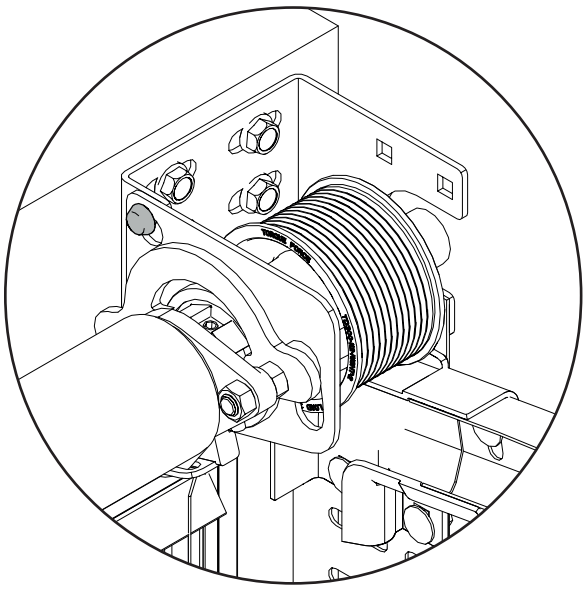



Once the spring mechanism has been fitted, use an M8 nut to secure the components together

Lift the bottom panel into the opening

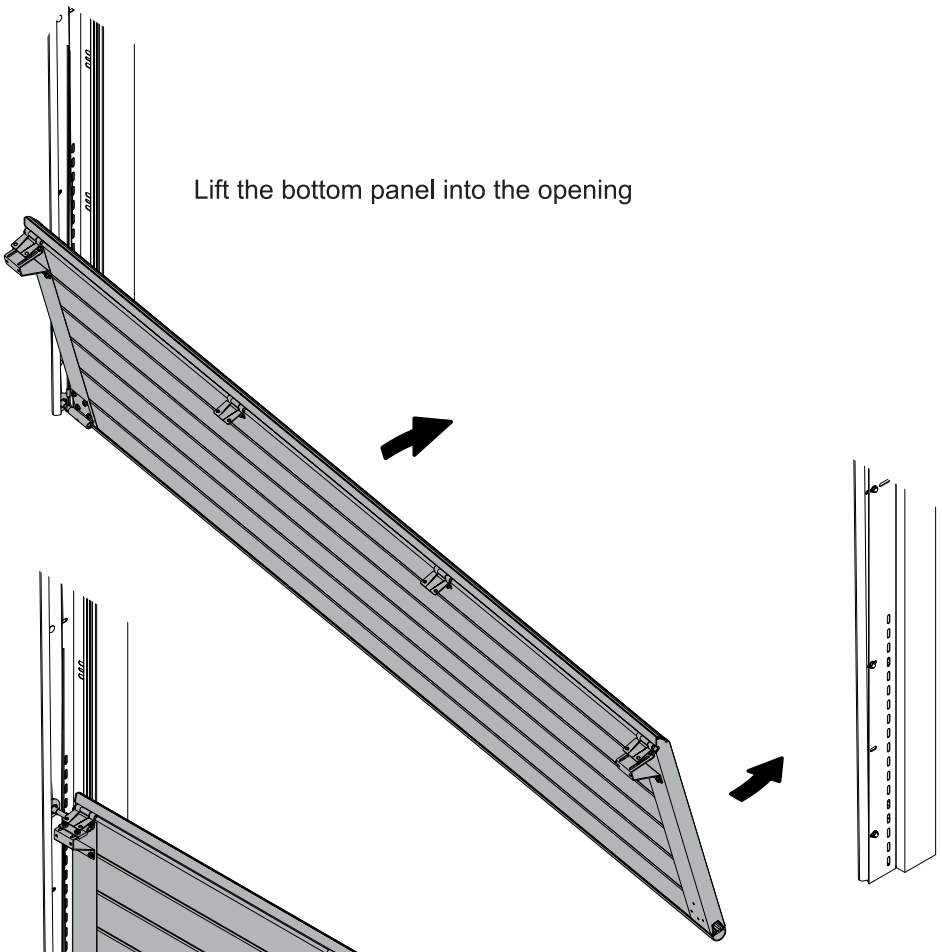

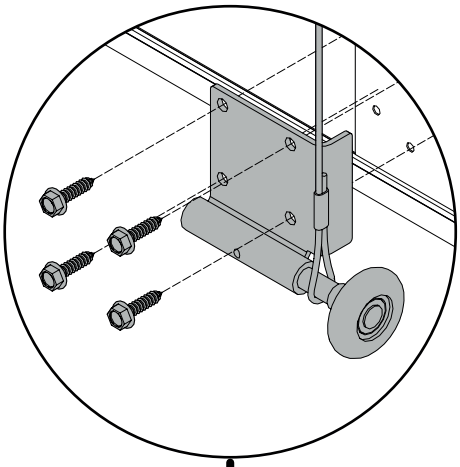


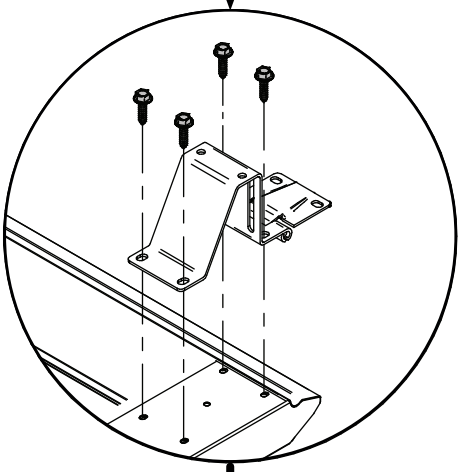


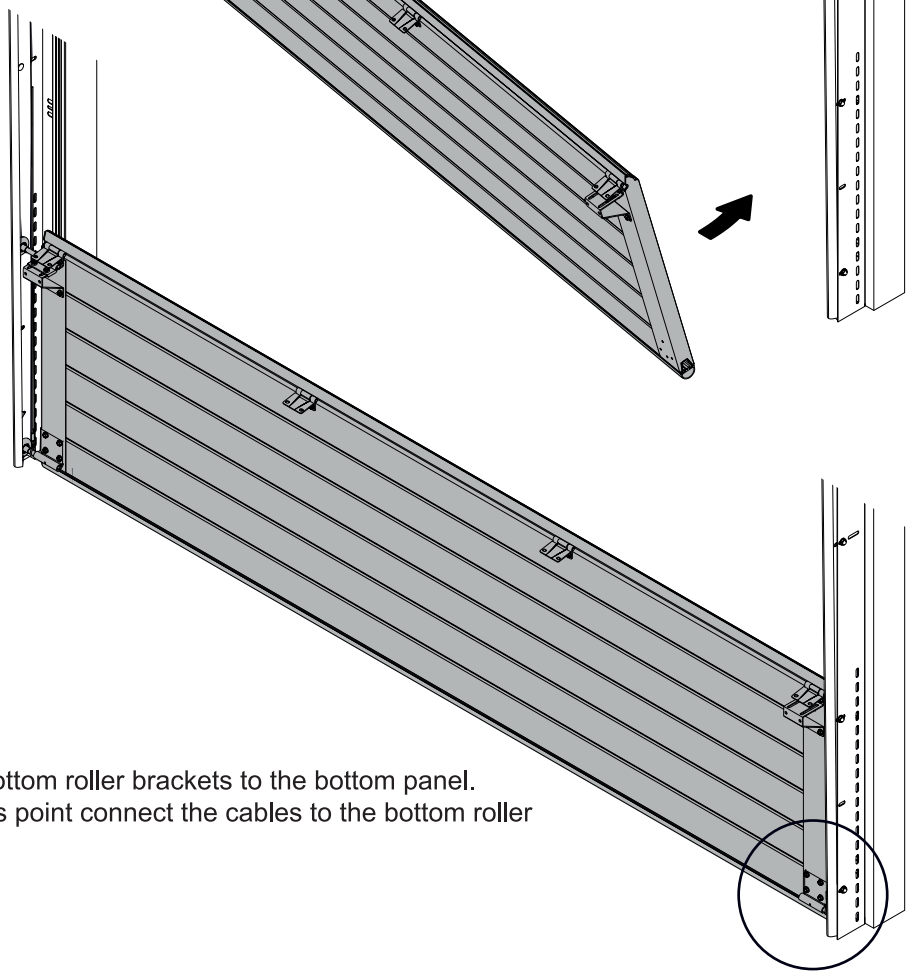


Fix bottom roller brackets to the bottom panel.
At this point connect the cables to the bottom roller


Insert the roller into the track and secure the sliding bracket

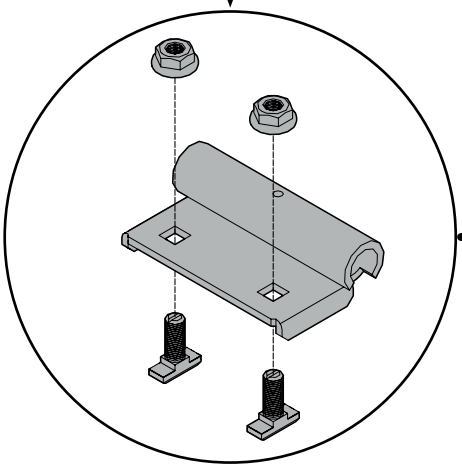


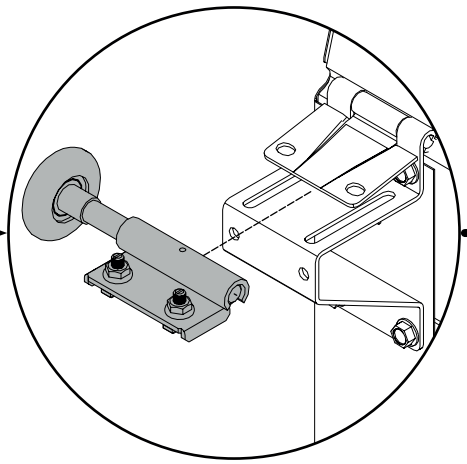

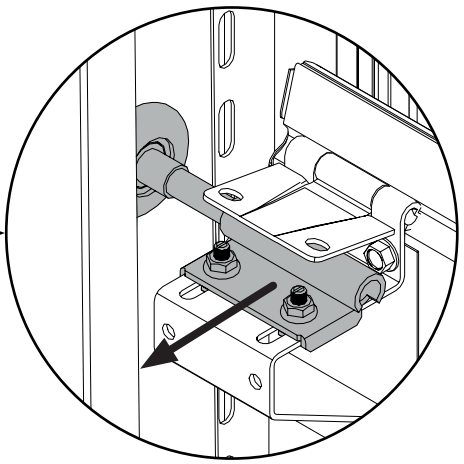


Lift the second panel into the opening and secure the brackets and roller, as per panel one

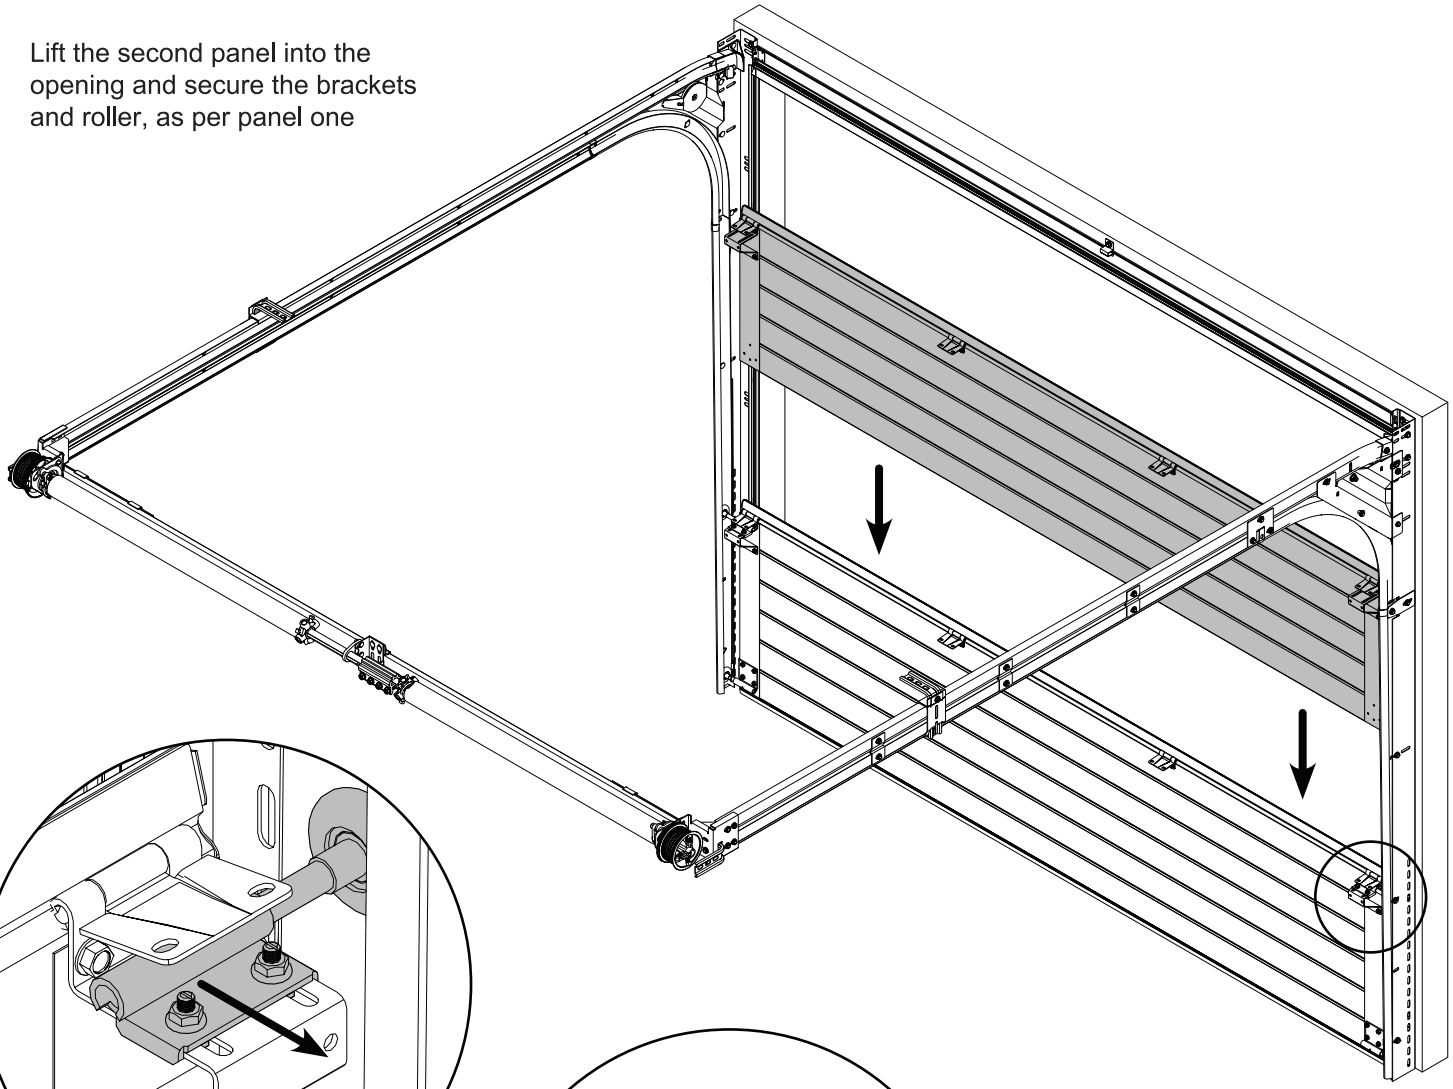


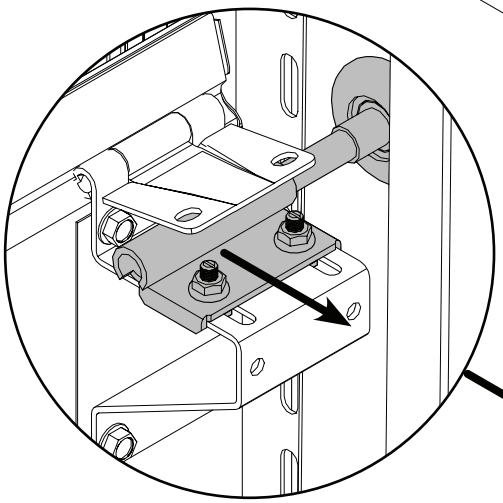


Ensure the roller is located within the track

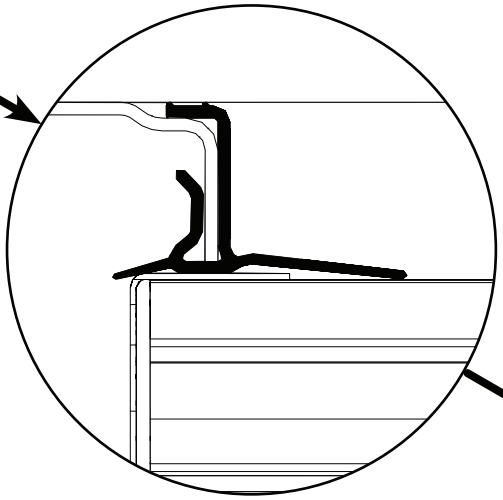


Check panels sit well with the weather seal on vertical tracks

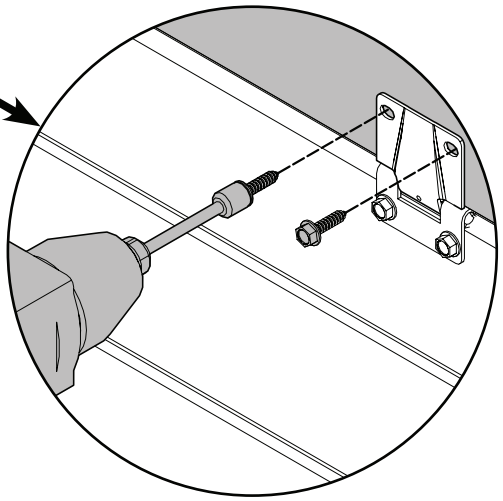



Secure central hinges

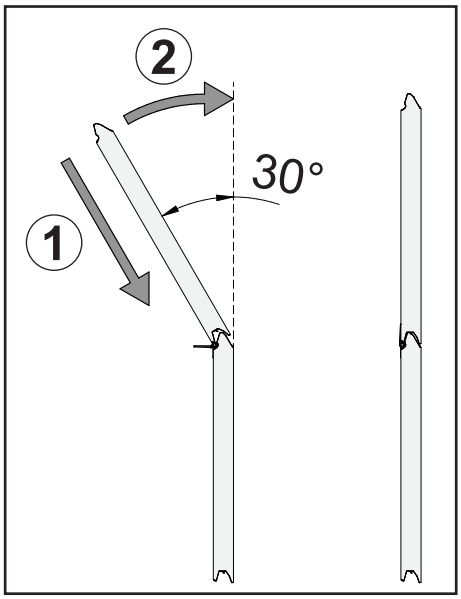


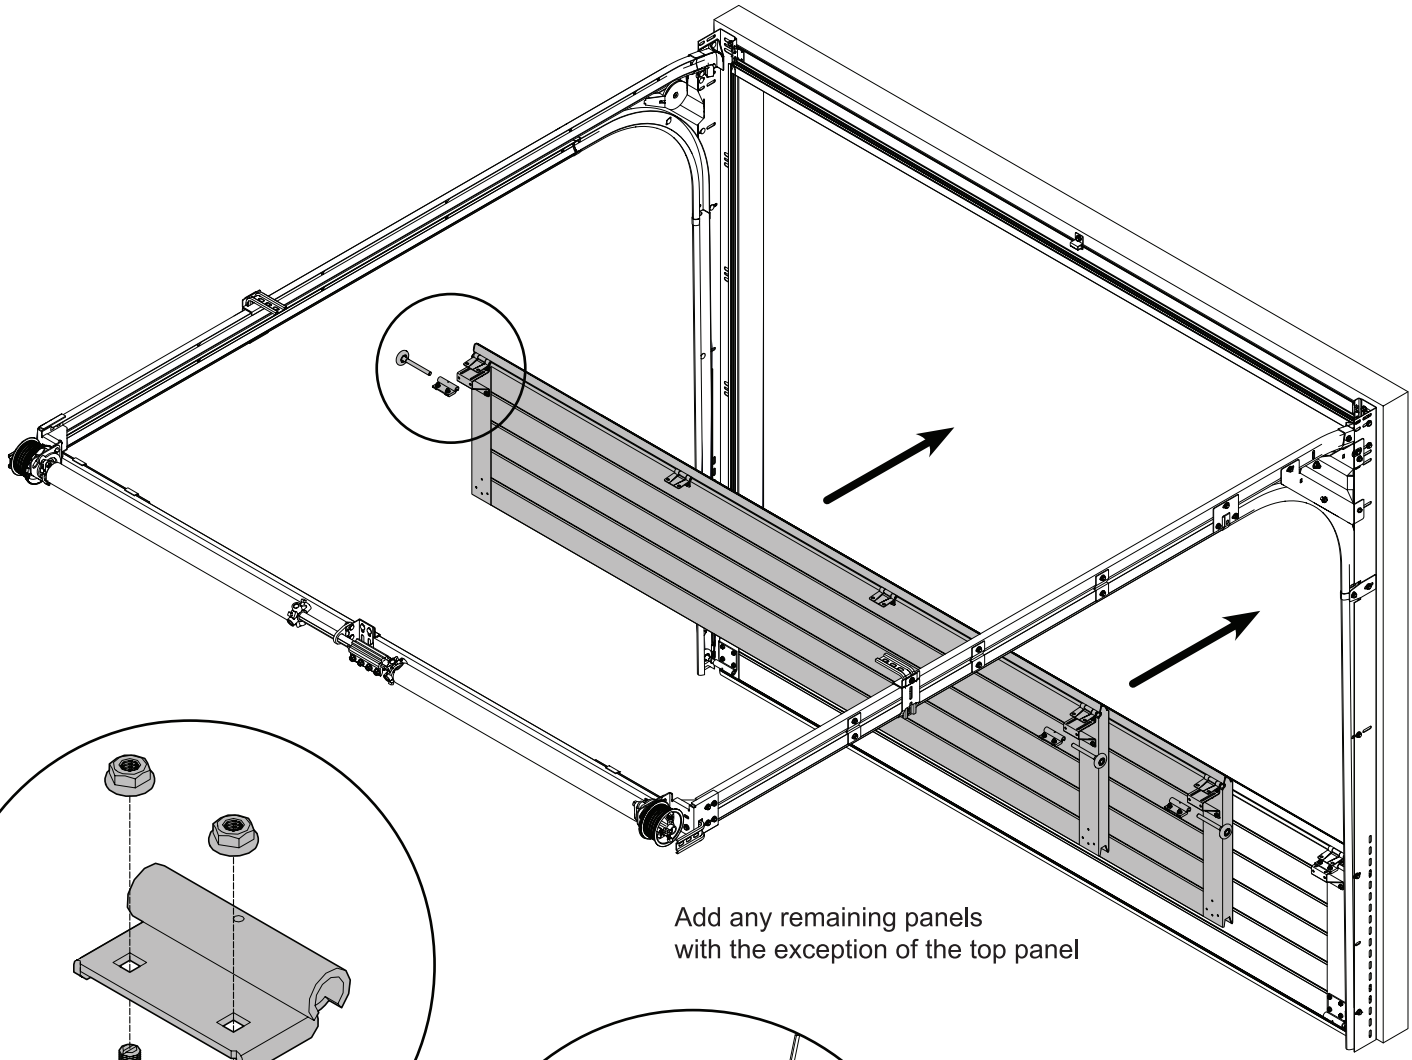



Add any remaining panels
with the exception of the top panel

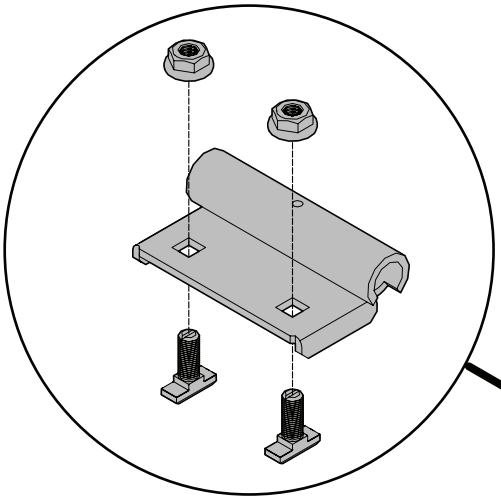

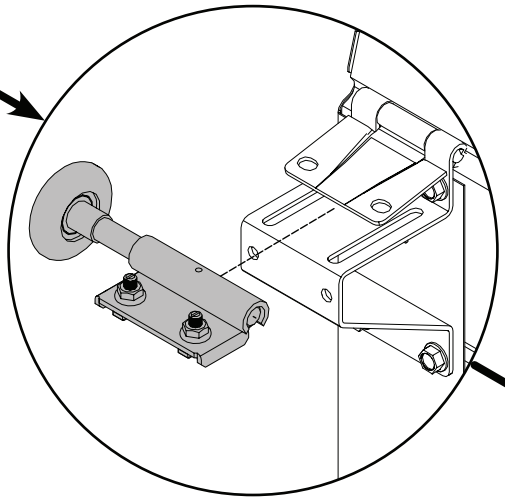


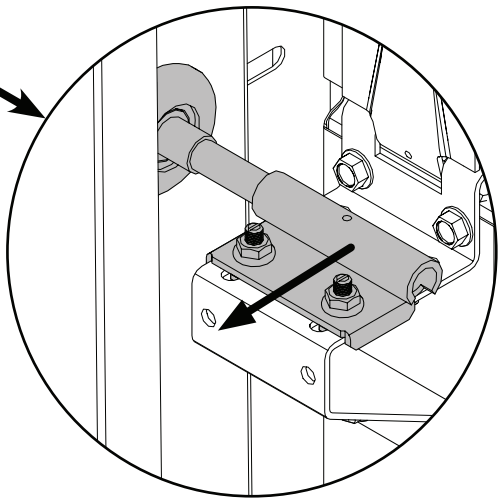

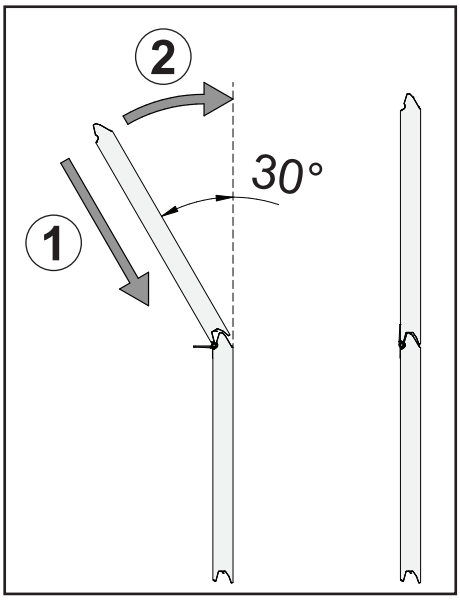


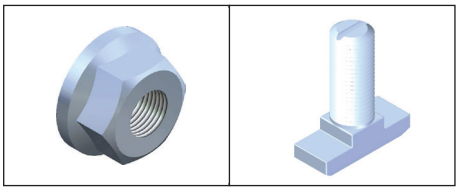

Lift top panel into opening

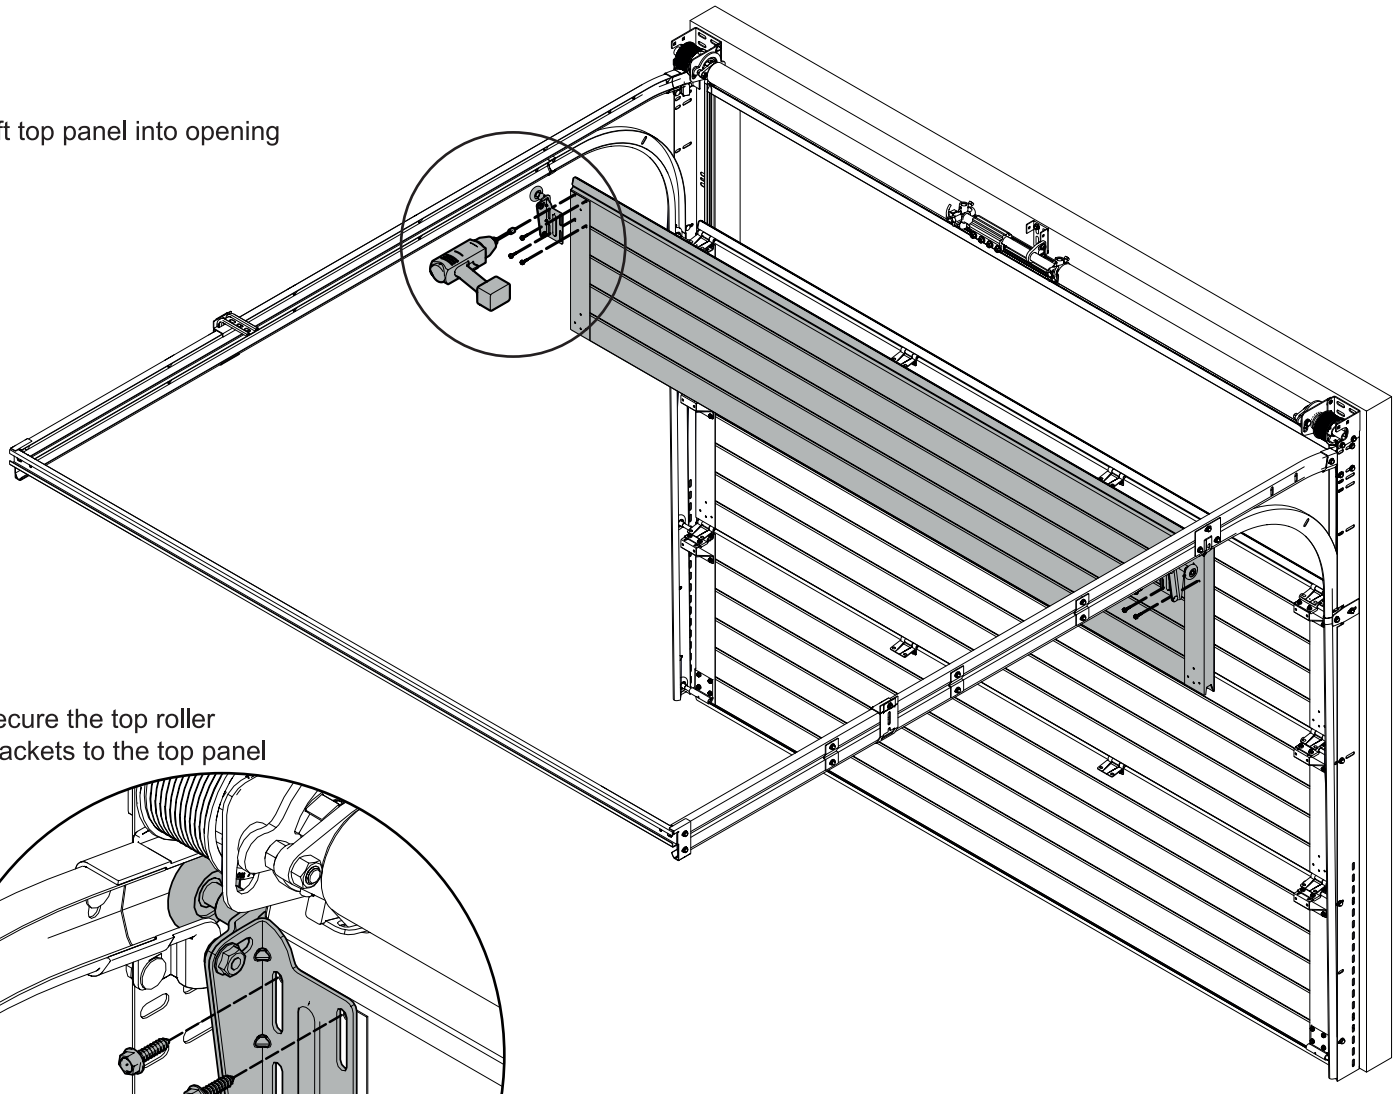



Secure the top roller brackets to the top panel

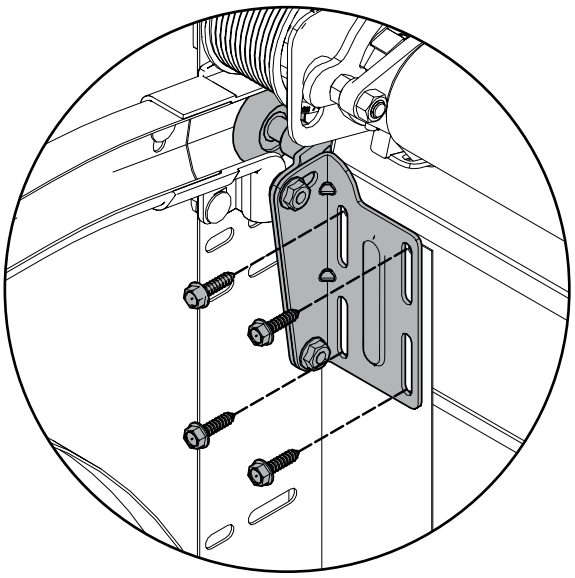



Secure any hinges similar to the other panels


Adjust the top roller for manual or electric operation

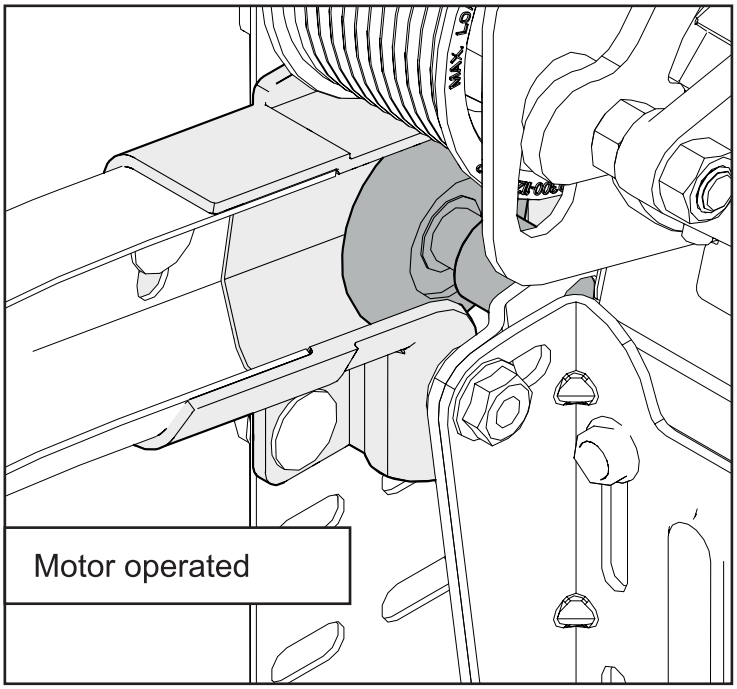

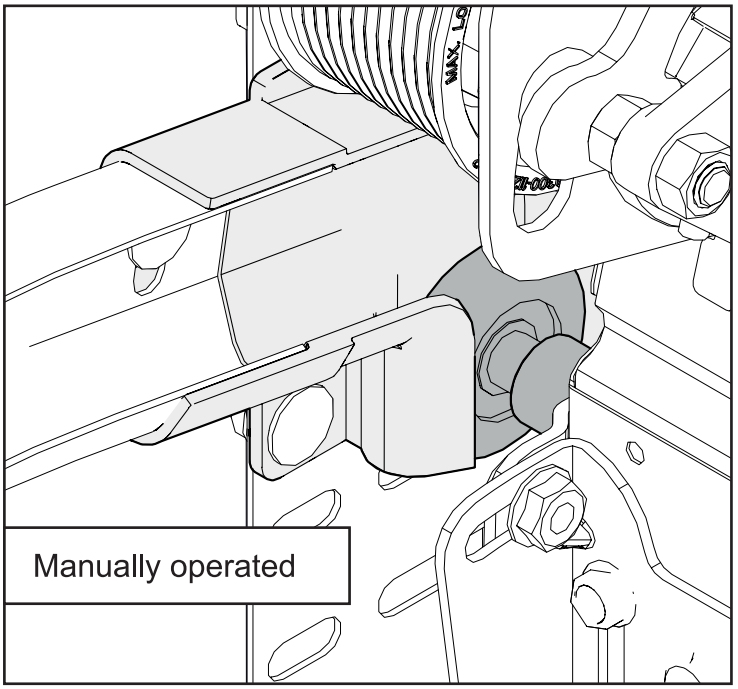

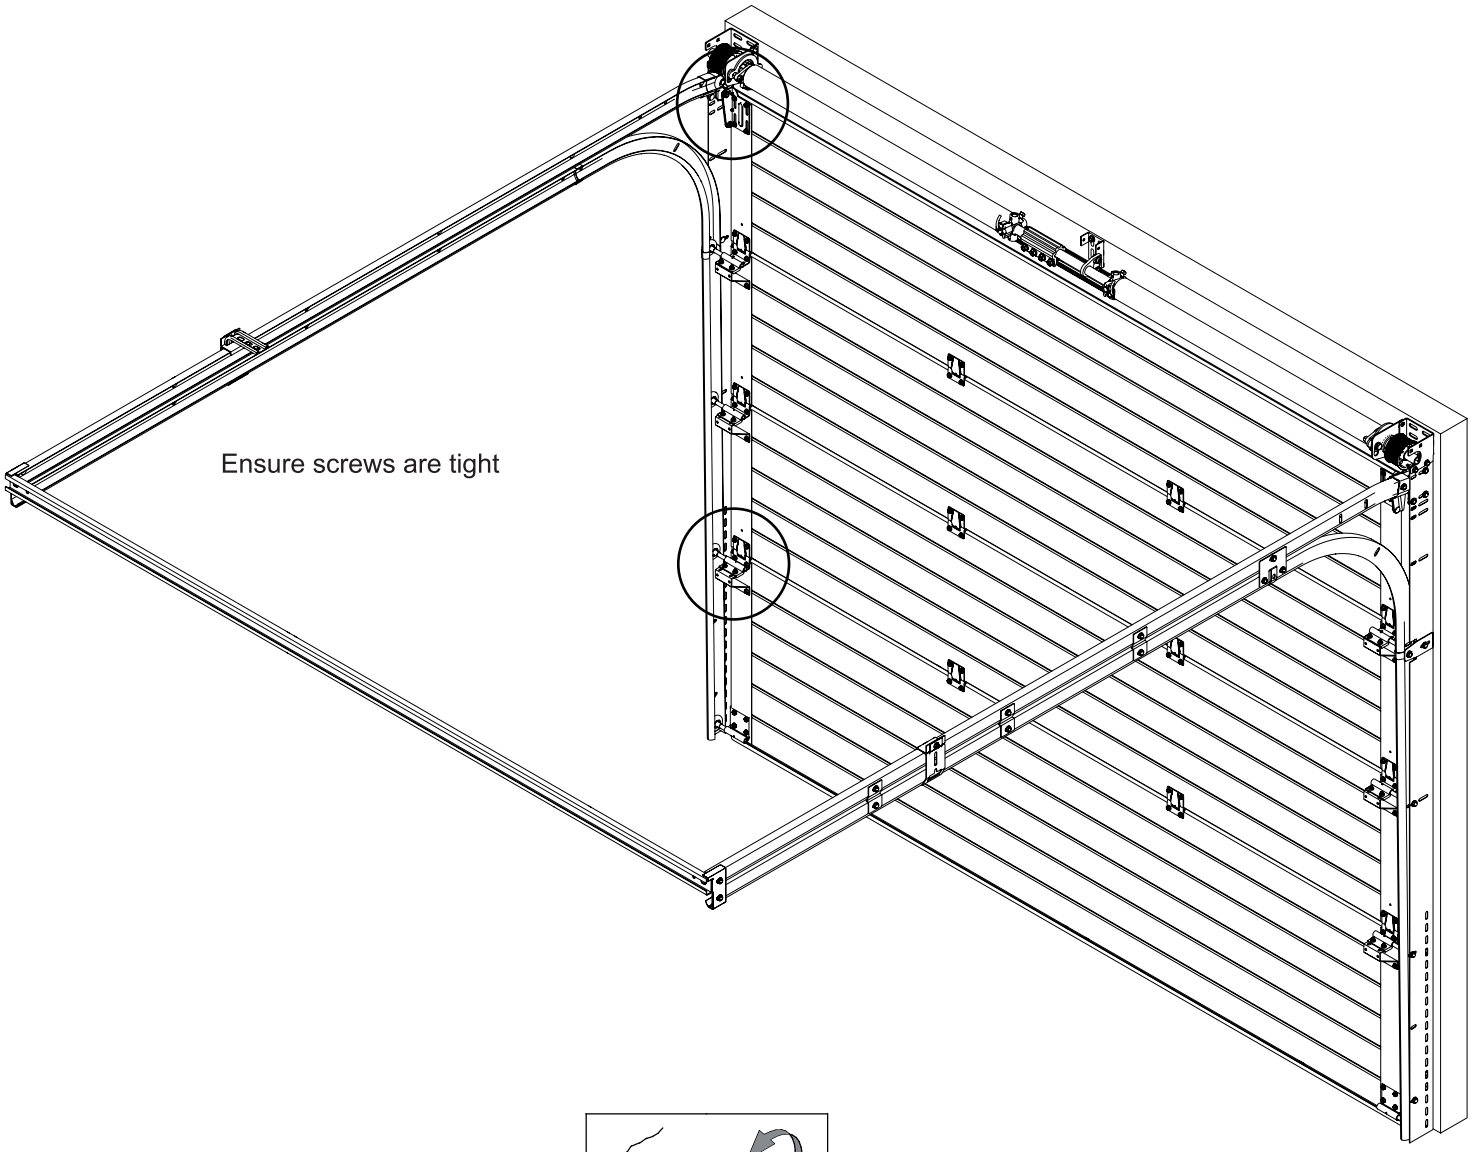


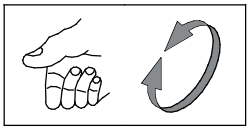


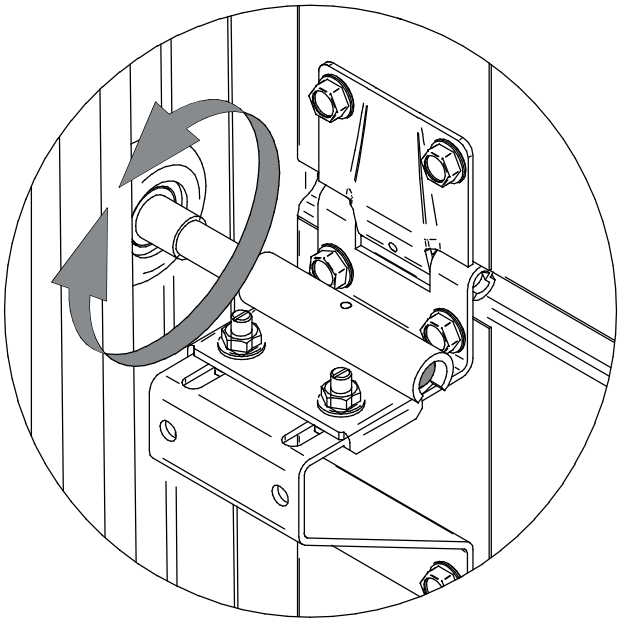


Ensure rollers are freely moving


Before tensioning the door, clamp the panels into the down position

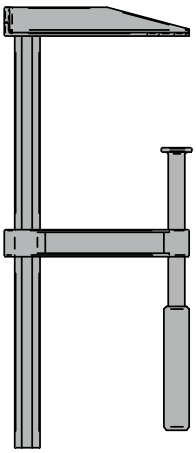


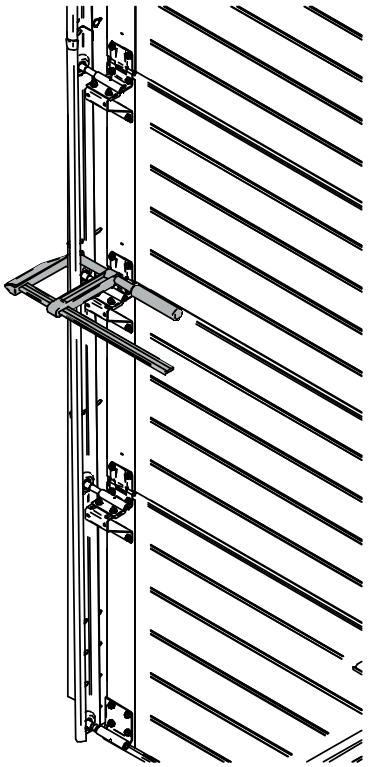

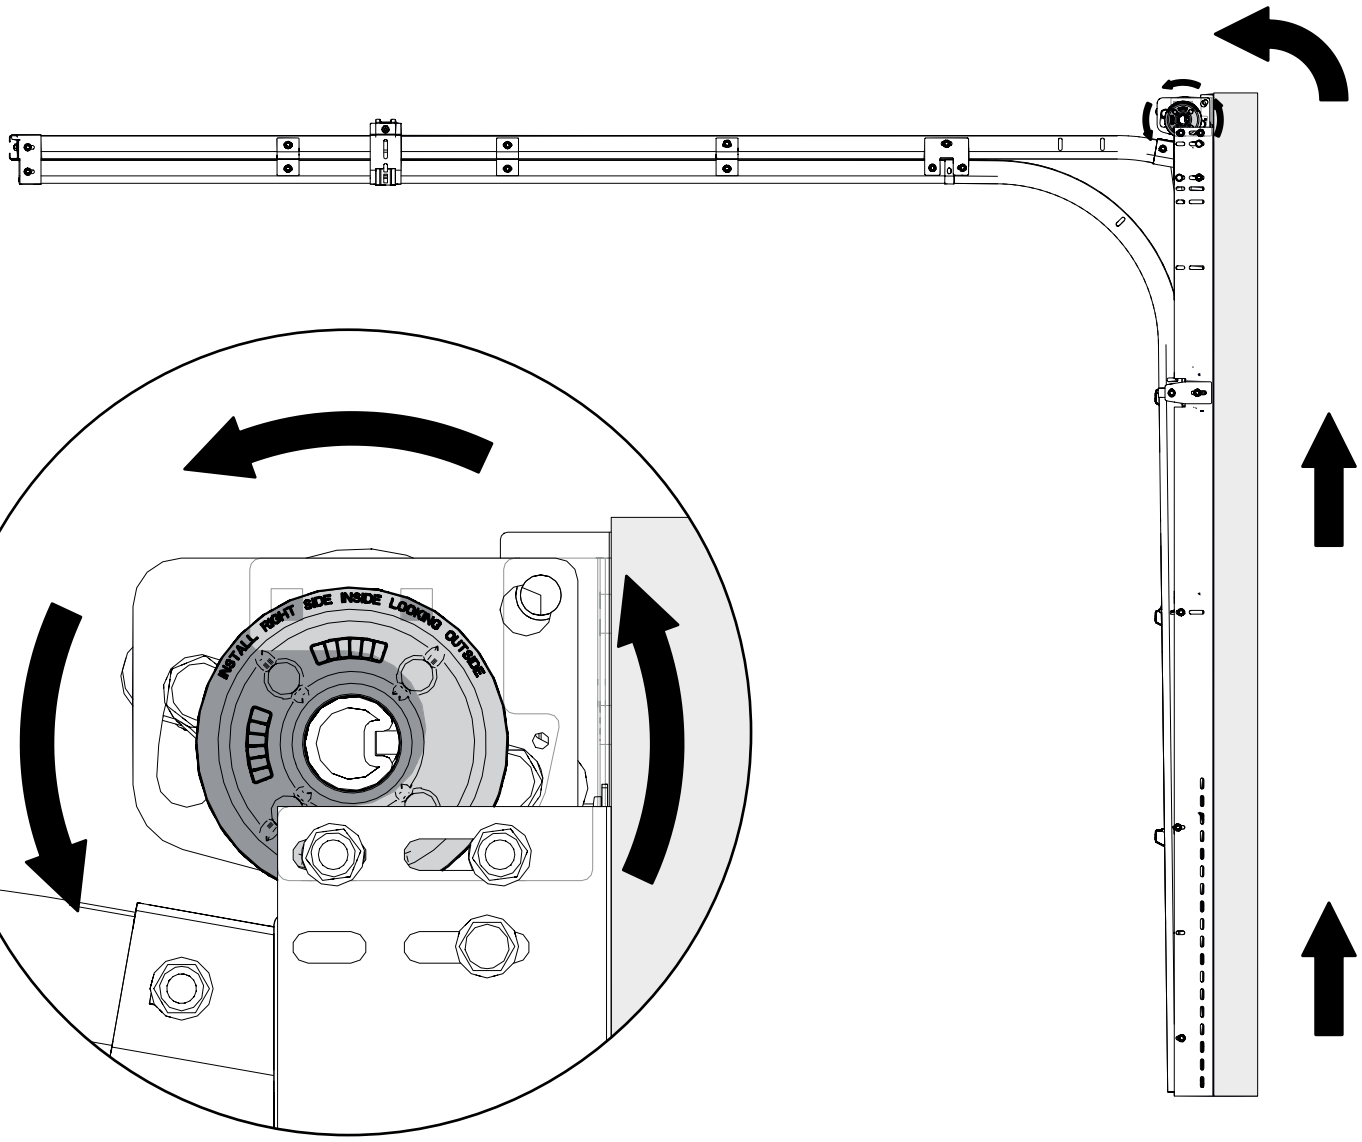

Ensure the cables fit neatly into the groove

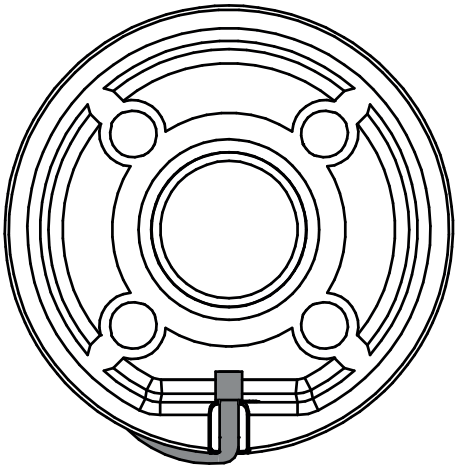

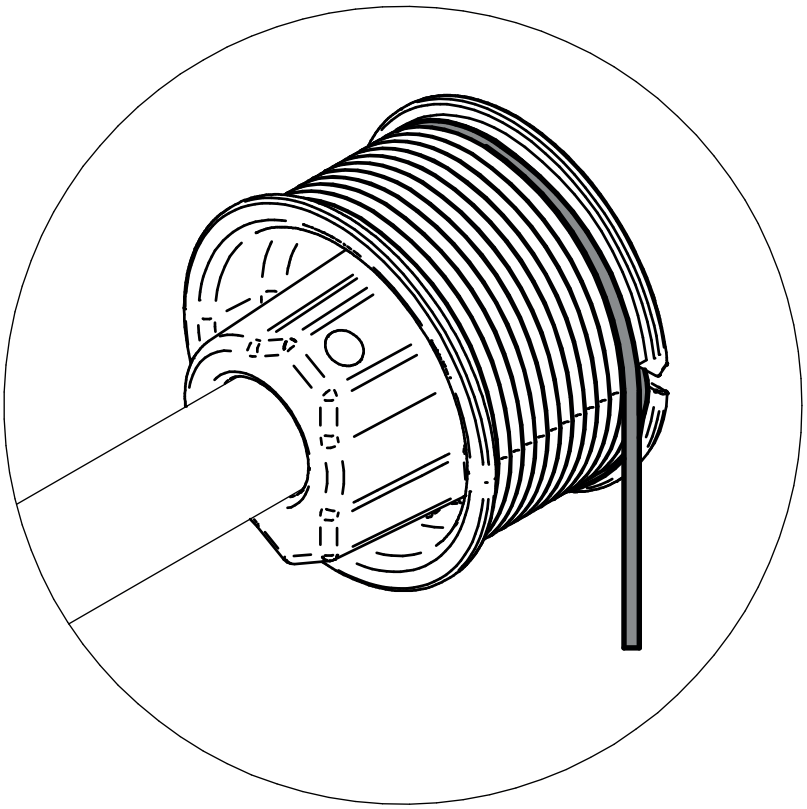

Locate the cable lug into the notch on the outside of the cable drum

Check paperwork or spring tension label located on the spring for number of turns




SPRING < 152 mm

SPRING < 67 mm

STEEL 52


1

Insert the tension bars securely

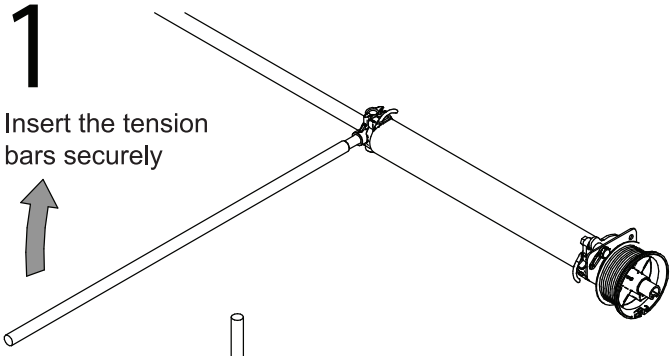


2

Tension the springs towards the lintel

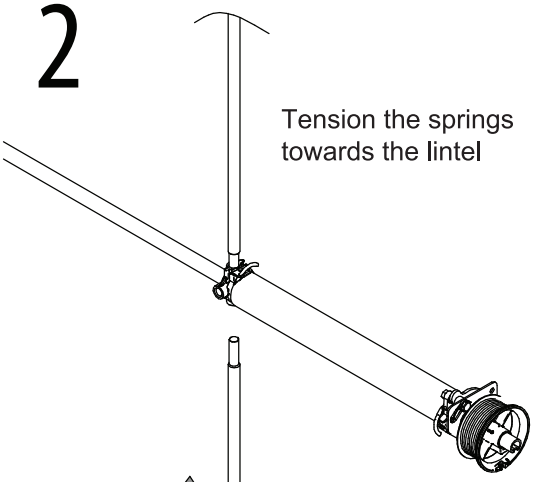


3

Ensure you add the correct amount of turns

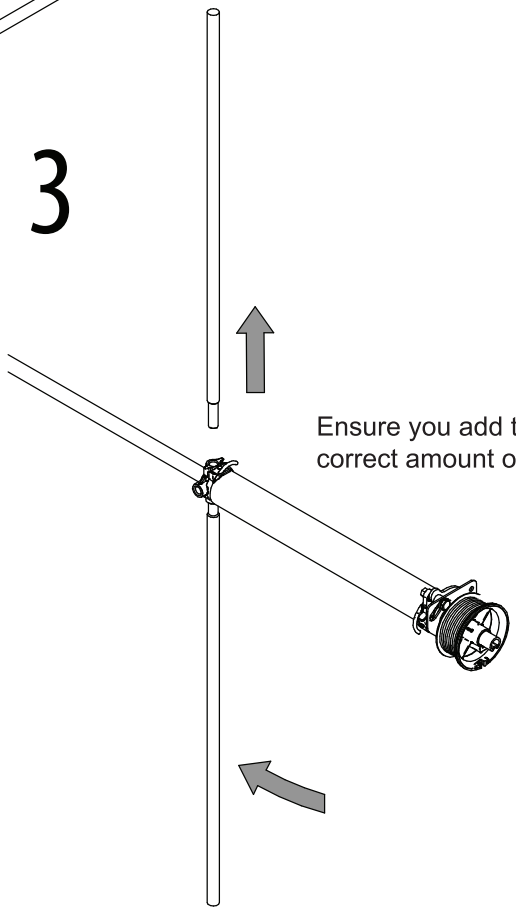

4


Once the tension is complete, ensure the spring is securely bolted

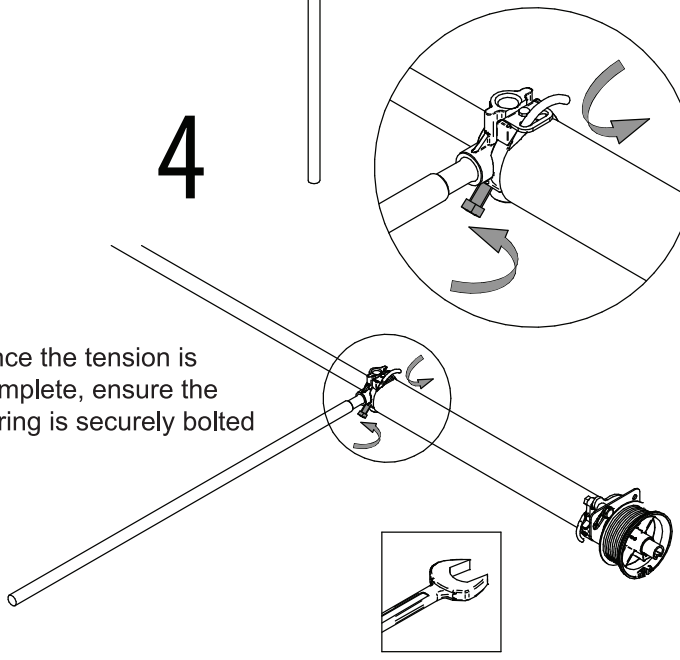







EN: Correct fastening of winding plug

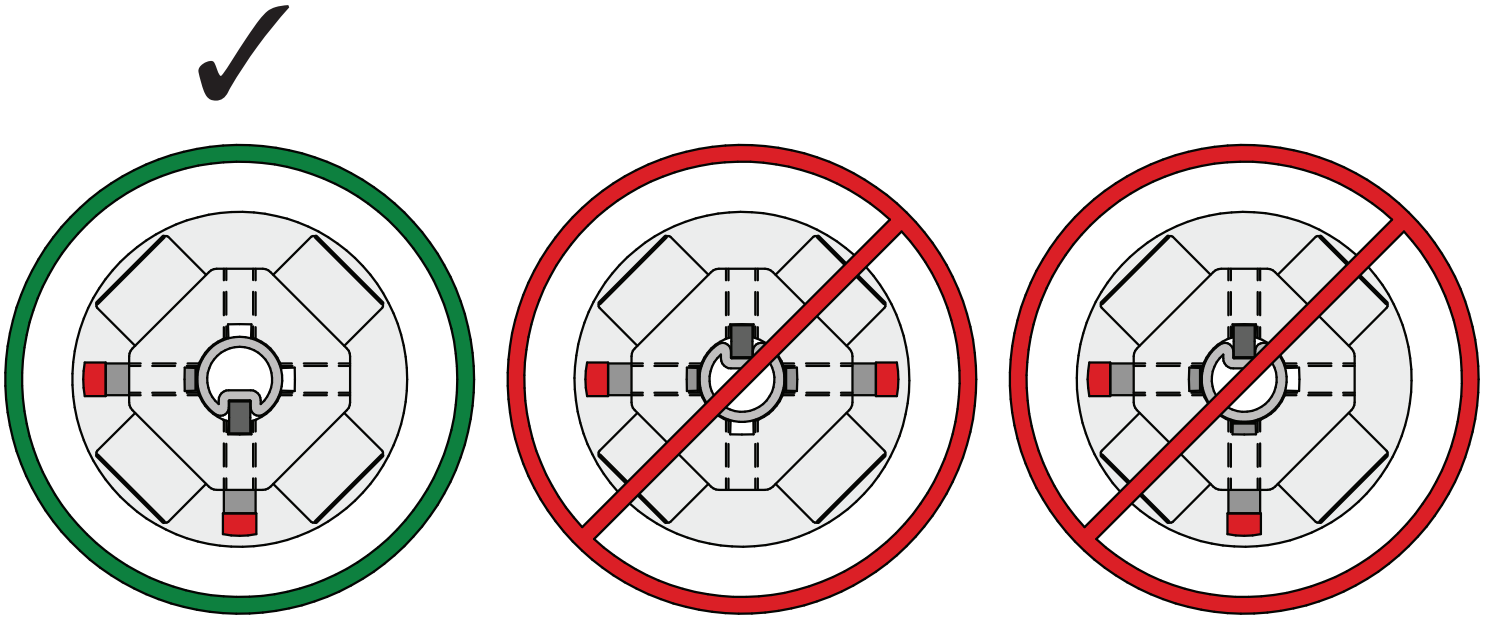

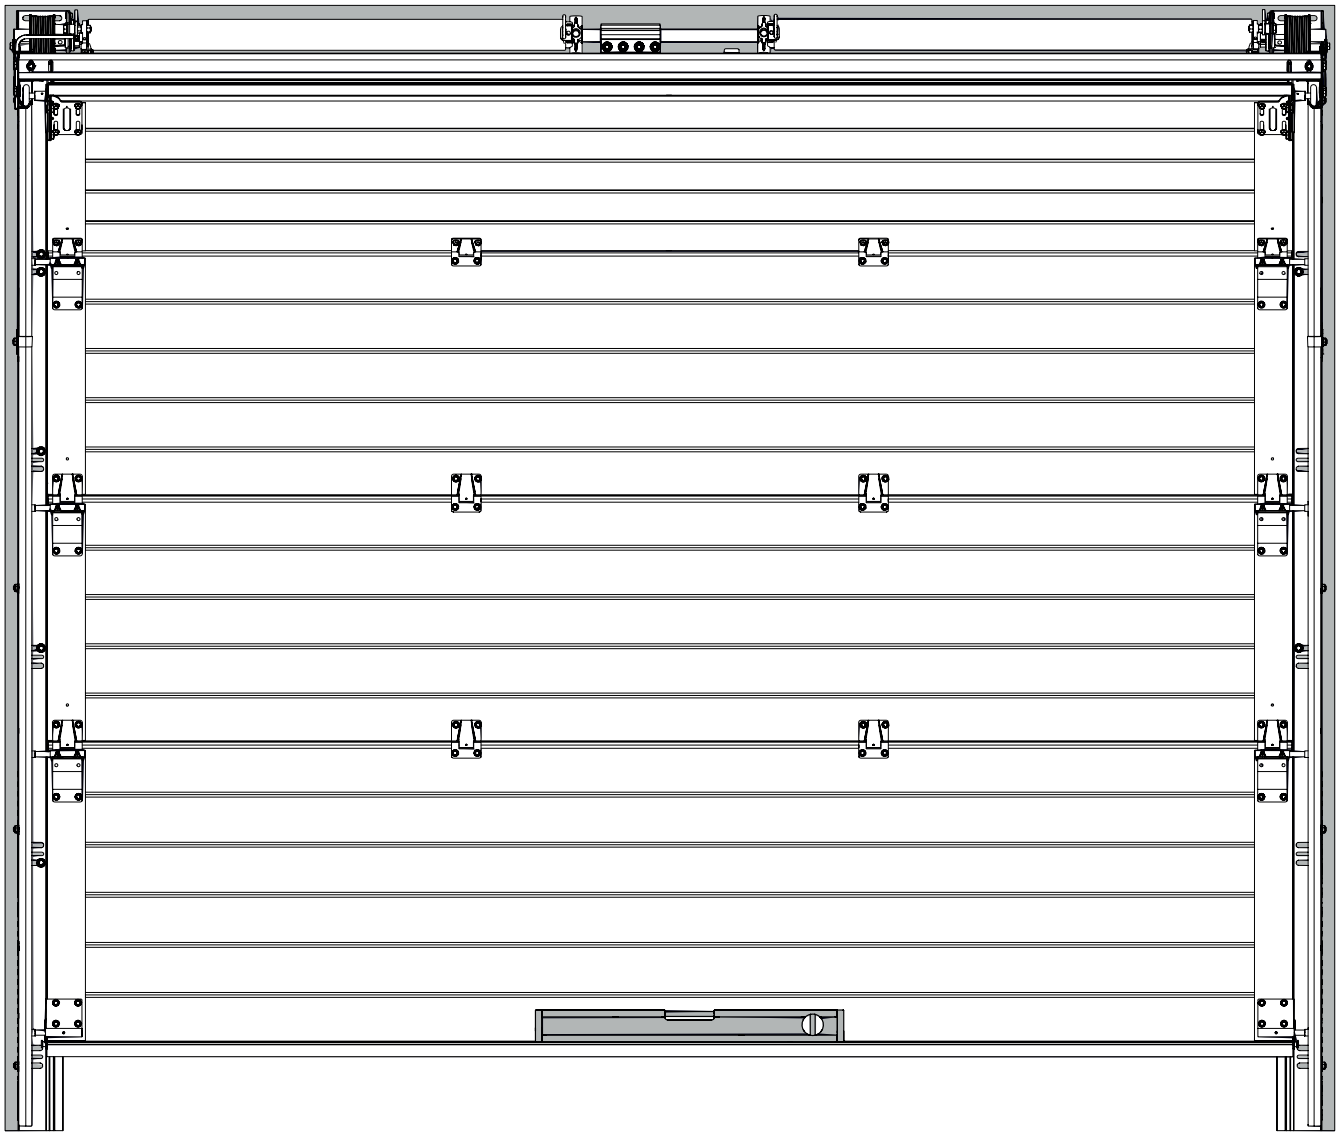



Once the tension is in place, check that the door is level.
Check the balance and adjust if necessary

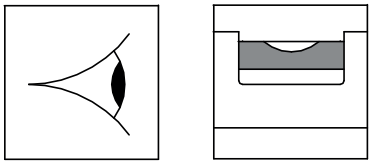


Reveal Options

Executive Framing Kit

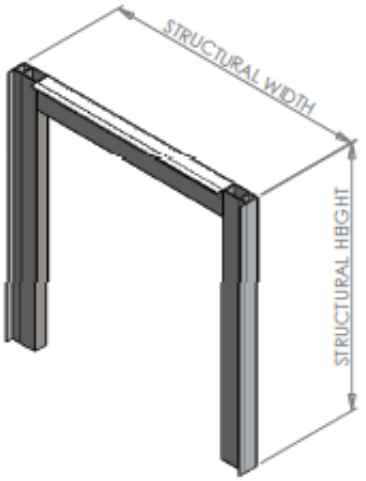

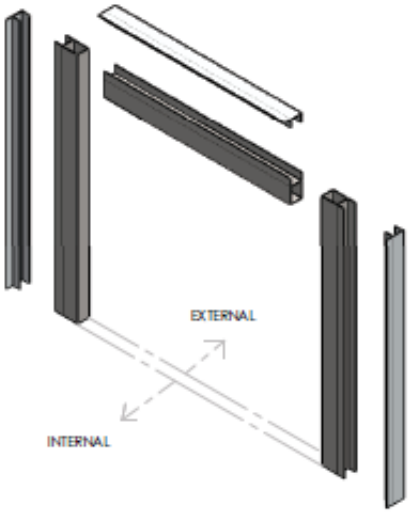

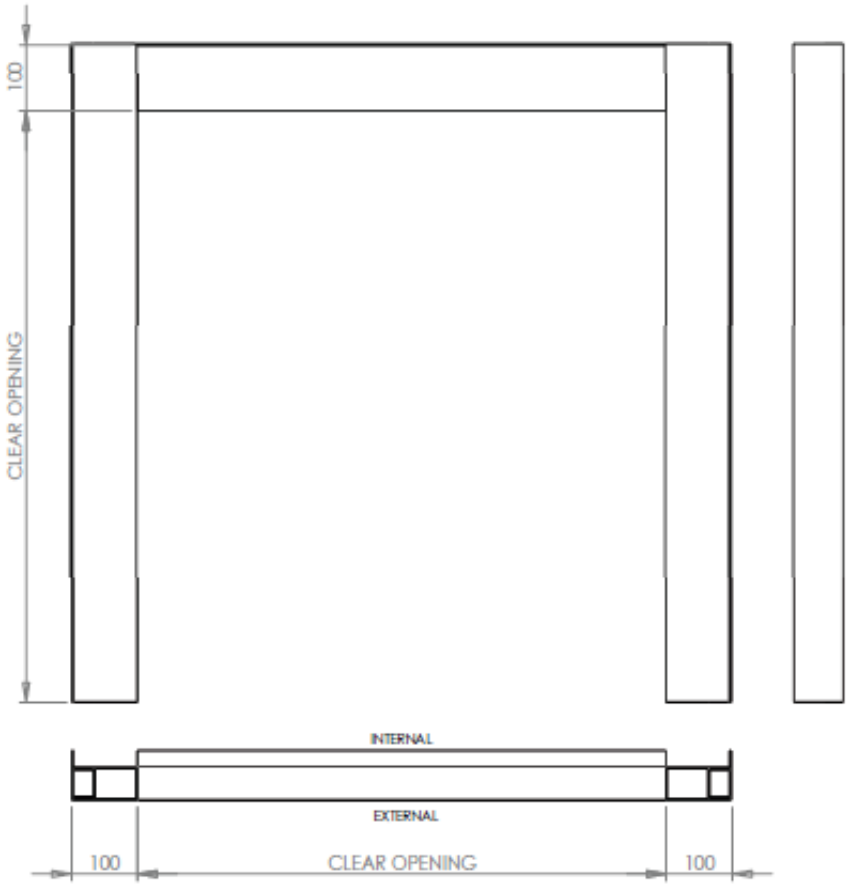

Reveal Brackets



Position 5 per side, secure each bracket with 2 M8 x 18 bolts and M8 serrated nuts